

 
Opening and shutting of door door the glass etc.

Opening and shutting of reception desk door Riyadoa

Method of lock and unlocking with key

Driver's seat

Passenger's seat *

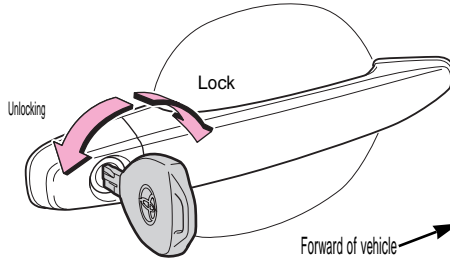

It is locked when spending ahead, and it is unlocked with by.

Knowledge

When the driver's seat door is locked and unlocked with the key

All doors (Include the backing door) are locked and it is possible to unlock it.

However, when the driver's seat seat belt is installed, only the driver's seat door backing door is locked and unlocked.

About the key

- Use the key for the start and the stop, etc. of the engine besides the lock and unlocking the door. -

In the anti-theft system installation car, do not lose the master key enough. The exchange of computers is needed to make the key when the master key is lost. Consult the Toyota shop in detail. -

Consult the Toyota shop when you make the key. The key might not turn smoothly when keys other than a Toyota pure goods are used. -

Consult the Toyota shop at once to prevent the theft and the accident, etc. when you lose the key by any chance. -

Refer to P.138 for the operation of the remote control of a wireless door lock. -

Refer to P.140 for a smart door lock. -

Refer to P.374 for an anti-theft system.

 Knowledge

 
About the specification of the key

The specification of the key becomes as follows by installing each function.


Anti-theft system installation car

- Smart door lock installation car


The master key (protector black) is two.



A sub-key (protector gray) is one.

 


Smart keys are 2 pieces.

 


- Wireless door lock installation car

 The master key with the wireless door lock remote control is two.



A sub-key is one.

 


- The number and the combination of keys might be different depending on the specification of the vehicle.


Exclude the anti-theft system installation car.

- Smart door lock installation car

 The key is two.




The number of keys is two.

 


- Wireless door lock installation car

 The key with the wireless door lock remote control is two.




- Exclude the smart, door lock wireless door lock installation car.

 The key is two.



About the Keenan bar plate

 It clocked on the Keenan bar in not the key but the plate so as not to understand the Keenan bar excluding the customer.




- Keep the Keenan bar plate in places other than the vehicle importantly. -

When the key is lost by any chance, the key to a Toyota pure goods can be made from the Keenan bar in the Toyota shop.



Method of lock and unlocking with door lock switch

 Driver's seat door

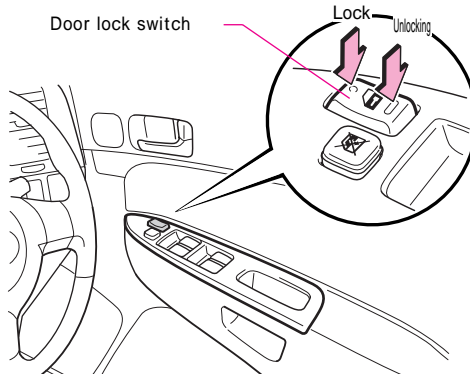

It locks when the front side of the switch is pushed, and when Gawa is pushed, it is unlocked. -
The lock and unlocking all doors (Include the backing door) can be done at the same time.

Knowledge

About the operation condition

 
- It is possible to use it regardless of the position of the engine switch. -
- When it keeps pushing the switch, it is likely not to operate. Separate the finger from the switch, and push again once.

About the security function

- The function to stop the unlocking operation with the door lock switch to prevent the vehicle theft etc. (Prevent it from being unlocked pushing the door lock switch from the space between the window frame and the door glass.)It functions automatically when locking in the following way. -
- Lock that inserts key in driver's seat door. (Refer to P.116.)-
- Lock that uses remote control of wireless door lock remote control smart key. (Refer to P.138,143.)-
- Re-lock when door after unlocking is operated by remote control of wireless door lock remote control smart key is not opened. (Refer to P.139,144.)-
- Lock that uses smart door lock function. (Refer to P.141.)-
- Re-lock when door after unlocking is operated by smart door lock function is not opened. (Refer to P.142.)-
- Lock outside car with lock lever. (Refer to P.120.)


Method of lock and unlocking with lock lever

- Lock and unlocking in car

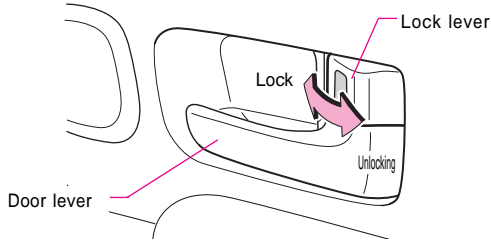

It locks when the lock lever is pushed forward, and it is unlocked when drawing it out backward. - The backing door is locked additionally and unlocked by the lock and unlocking with the lock lever of the driver's seat door.

 - Method of lock outside car

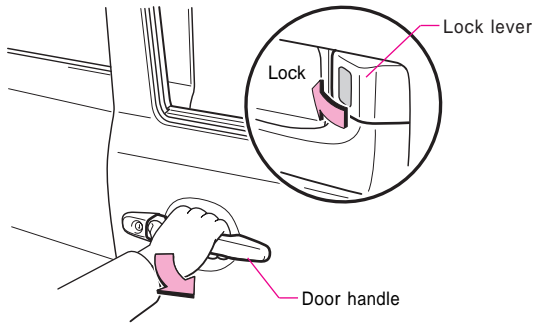

The reception desk door adjusts the lock lever to the lock side, and closes the door with the door handle pulled.

Riyadoa adjusts the lock lever to the lock side, and closes the door.



About a convenient function

The door opens when the driver's seat door pulls the door lever in the car even if the lock lever is a lock side.



● Method of lock and unlocking by remote control of wireless door lock

 
Refer to "How to use of the remote control of a wireless door lock" of P.138.

● Method of lock and unlocking by smart door lock

Refer to "How to use of a smart door lock" of P.140.

● How to use of the child protector.

Riyadoa

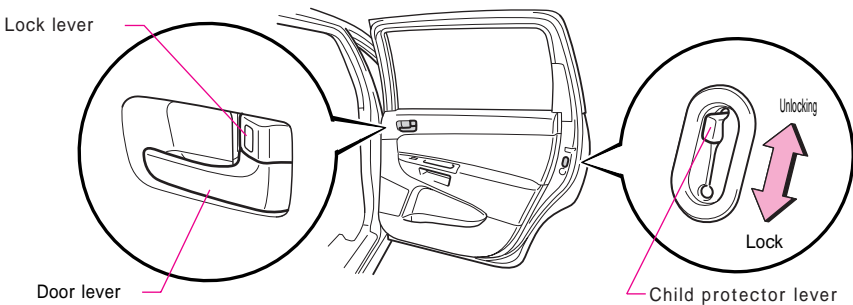

The child protector lever is adjusted to the lock side and the door is closed. - Riyadoa cannot be opened with the door lever in the car.



Knowledge

About the child protector

The child can mistake and it lock in the operation of the door lever in the car regardless of the position of the lock lever while running so that Riyadoa should not open not to open the door and to exist.

How to open door when child protector works

Put the lock lever into the state of unlocking, pull the door handle outside the car, and open it. Open the door glass, put the lock lever into the state of unlocking, pull the door handle outside the car, and open it when opening it in the car by any chance.



Confirm all doors have closed surely before it runs.

- Confirm all doors have closed surely before it runs. It opens suddenly while running if the door is not surely closed the door, might cause an unexpected accident, and is dangerous. -
- Do not pull the driver's seat door lever while running. In the worst case, it reaches important injury or, it is likely to lead to the death by the door's opening and being thrown out outside the car. -
- Do not let the child operate the door.
 - 藪 Important injury might be received by placing the hand, the head, and the neck, etc. when closing and it is dangerous.
 - 藪 The door might be opened while running, the child throw out outside the car, and it reaches important injury or, in the worst case, it lead to the death.



About a convenient function

Forgetting to pull out key prevention chime

The chime that warns the key to forget to be pulled out rings , saying that "Pepe and Pepe" when the driver's seat door is opened when the engine switch is LOCK or ACC. Lock after confirming it has the key for the shutting prevention of the key.

Key shutting prevention function

Even if it locks from the state to open the driver's seat door with the door lock switch and the lock lever, it is not possible to lock when the key has been inserted in the engine switch.

Eliminated doent oreshistem

It synchronizes with unlocking that uses a key wireless, door lock smart door lock and the opening and shutting of the door, and a reception desk personal lamp (When the switch is DOOR), the interior light (When the switch is DOOR), and the engine key lighting are lit and turned off. -

Light when you open the door, and turn it off in about 15 seconds when closing. -

Light when all doors are closed, and the engine switch is made LOCK from ACC, and turn it off in about 15 seconds. -

In the following cases, turn it off at once.

藪 When all doors are closed, and the engine switch is made ACC or to turn on.

藪 When you close all doors when the engine switch is ACC or is turned on.

藪 When all doors are closed, and the door in the driver's seat is locked.



Knowledge

About the effect of the lock and unlocking while getting on

It locks while getting on, there are the following effects respectively about unlocking, and select it.

. Lock while getting on. .

- Prevent the door those' who multiply this mistaking and being opened. -

Prevent an unexpected intruder outside the car. -

The possibility to be thrown out outside the car at the accident along with wearing the seat belt decreases.

. Unlock it while getting on. .

- It becomes easy to receive the rescue operation outside the car in case of emergency.

When parting from the car, the engine is obligated to stop without fail and to be locked by the law. Moreover, the thing in the vehicle theft and the car might not be stolen, and do not put valuables etc. in the car.

Contents



Warning

Basic
contents, operationDriving
Handling
deviceThe
Handling indoor
equipmentgood. Safety
of
To
theory/automobile
and
equipmentHow
to
attention
associate driving,
car



Maintenance

Myriad
One(D)と
with

Index

 Method of lock and unlocking 

Refer to "Method of the lock and unlocking with the lock lever" of "Method of the lock and unlocking with the door lock switch" of "Method of the lock and unlocking with the key" of P.116 and P.119 and P.120.

 Method of lock and unlocking by remote control
of wireless door lock 


Refer to "How to use of the remote control of a wireless door lock" of P.138.

 Method of lock and unlocking by smart door lock 

Refer to "How to use of a smart door lock" of P.140.



Method of opening and shutting

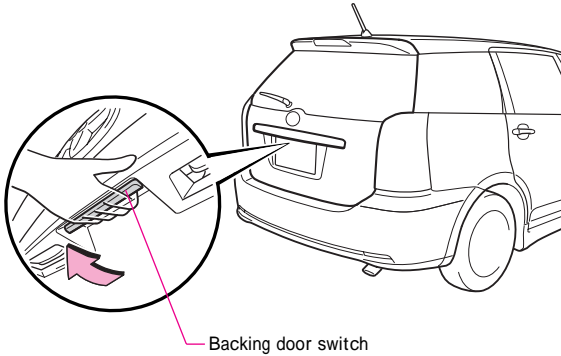

- When opening it

Push the backing door switch, and lift the backing door. -

Lift to the uppermost part when you open the backing door. -

Confirm the backing door doesn't descend naturally.

- When closing

1 Sell the backing door wholesale.

2 Suppress, and lock bottom.



Confirm the backing door has closed surely before it runs.

- Confirm the light shake of the backing door before it runs and the lock surely. It opens suddenly while running if the backing door is not surely closed the backing door, might cause an unexpected accident, and is dangerous. -

Do not place other people's hands etc. when you close the backing door. Moreover, do not let the child operate the door. In the worst case, it reaches important injury by placing the hand, the head, and the neck, etc. when closing when the child operates it or, it is likely to lead to the death. -

Close the backing door pushing from the outside without fail. When the backing door is closed directly in the backing door grip, the hand and the arm are placed between the backing door, and important injury might be received and it is dangerous. -

Never take the person in the luggage room. In the worst case, it reaches important injury when time that slammed on the brakes and colliding or, it is likely to lead to the death. -

Do not run with the backing door opened. The backing door hits the one outside the car etc. if running while opened, and it might cause an unexpected accident. Moreover, the vehicle exhaust emission invades in the car, it becomes CO intoxication, and it reaches important injury or, in the worst case, it is likely to lead to the death. Confirm the backing door has closed without fail before it runs. -

Do not close the backing door, and do not hang with Baccdoadamparsta.

It might cause an unexpected accident by placing the hand, and shifting when Damparsta is damaged and is dangerous.

**注意****Open completely without fail and use the backing door.**

- Open completely without fail and use the backing door. The backing door drops when using it while opened half, and it is likely to injure. -


When the backing door is opened and shut in the inclining place, opening and shutting from a smooth place to the backing door might not be done easily, and it open and shut suddenly. -

Damparsta to support the backing door in the backing door is installed. Guard the following to prevent damage and defective operation of Damparsta.


蘆Foreign bodies such as the vinyl splinter, stickers, and adhesive materials must not adhere to the rod part of Sta (expansion and contraction part). Moreover, ..rod part.. do not touch with cotton work gloves etc. to prevent the adhesion of the fiber etc. When Sta smoothly doesn't move or open it, retentivity might be ruined when the foreign body adheres.

蘆Do not install the accessories articles other than a Toyota pure goods in the backing door. When opening it, Sta might not be supported when the weight of the backing door becomes extremely heavy.

蘆Do not get on giving a lot of care to Sta, do not descend, and do not put power horizontally. Sta bends, and the backing door might not be able to be opened and shut.

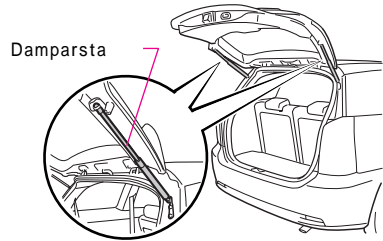**Knowledge****About a convenient function****Backing door grip**

When the backing door is sold wholesale, it is convenient.

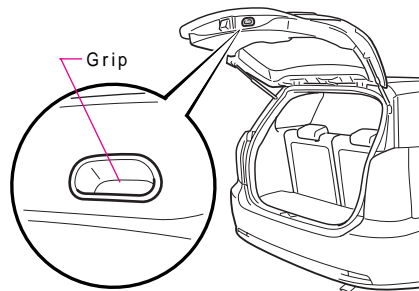**About the safety feature**

The backing door can be opened only while stopping because of safety.

Contents



Warning

Basic
causes, operationDriving
Handling
deviceThe
Handling/indoor
equipmentGood. Safety
of
To
theory/outline
and
equipmentHow
to
attentionAssociate
aiming
car

 
Maintenance

Myriad
One(D)七
等

Index


About the emergency lever

The door lock can be released in the car by operating the emergency lever when the backing door is not opened outside the car in the place where the battery goes up.

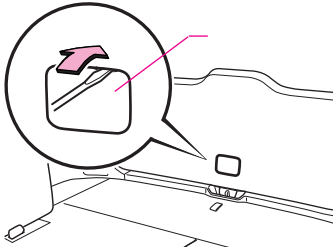

1 Open the cover of the emergency lever.

 Enter in the car, insert a minus driver etc. in the cutting lack in the upper part of the cover, and detach the cover.

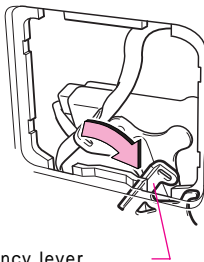

Emergency lever

2 Push the emergency lever.

When the lever is pushed in the direction of the arrow, the door lock is released.

3 Open the backing door.

Receive the check ahead of time in the Toyota shop when you break down.