


Opening and shutting of the door glass


How to use of the power window.

Driver's seat switch

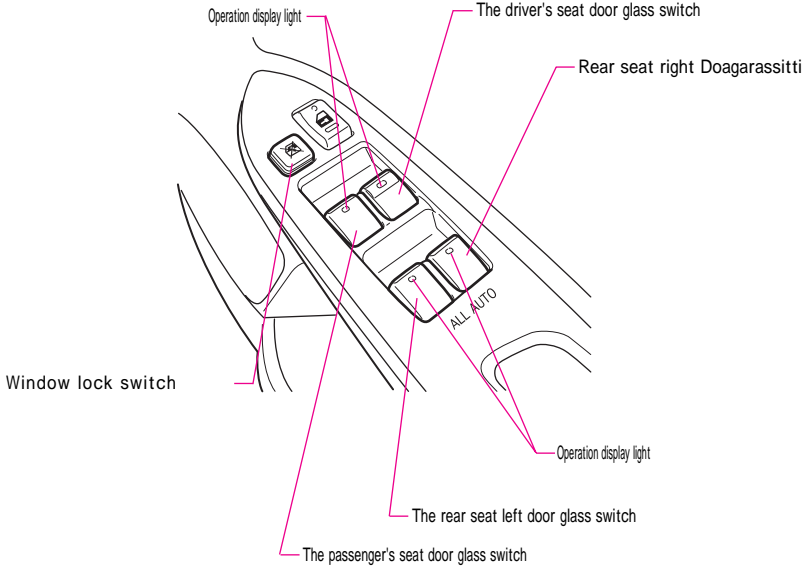

All the door glass can be opened and shut with the driver's seat switch.

Passenger's seat switch and rear seat switch

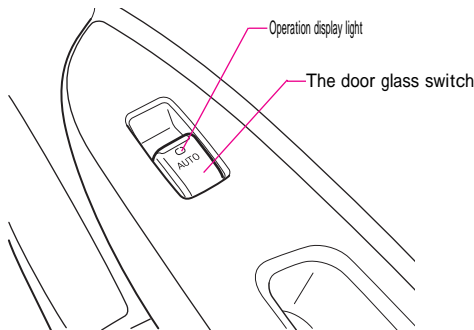

The door glass of the seat can be opened and shut.

- How to open and shut the door glass

It closes while it opens, and it has been pulling it up while the switch is being pushed below.
Stop at the position when you separate the hand from the switch.

- Automatic how to open and shut the door glass

- Separate the hand pushing the switch below strongly when you open completely.

Improve the switch lightly when you want to stop it on the way. -

Improve close all and the switch up strongly and separate the hand.

Push the switch lightly when you want to stop it on the way.



Knowledge

About the operation condition

When the engine switch is turned on, it is possible to use it. However, neither the passenger's seat nor the rear seat switch open and shut when the window lock switch (Refer to P.132) is turning on. -

The operation display light of each switch lights when the engine switch is turned on. -

Initialize the power window when the operation display light of each switch has blinked. (Refer to next page.)

About the safety feature

The prevention mechanism placing and crowding

The rise of the door glass is stopped when the scissors crowding of the foreign body is perceived between the window frame and the door glass when the door glass is closed, it opens by the automatic operation a little, and it stops. -

Might it place when time when the foreign body was placed and the same impact and the load join the door glass according to the environment and the running condition, it crowd, and the prevention mechanism operate.

About a convenient function

Key OFF latter harvest movement function

After it does, the door glass can open and shut about 45 seconds to ..engine switch.. ACC or LOCK. However, the door glass cannot be opened and shut when closing once after the driver's seat door will be opened in about 45 seconds. -

The operation display light of each switch lights while key OFF latter harvest movement functions.



Knowledge

About initialization

Initialize the power window when the connection with the battery is refused by the battery exchange and the fuse exchange, etc. -

The following function doesn't operate if the power window has not been initialized.

蘆 Passenger's seat in driver's seat switch and opening and shutting of the rear seat door glass

蘆 Automatic opening and shutting of the door glass

蘆 The prevention mechanism placing and crowding.

蘆 Key OFF latter harvest movement function

- The operation display light of the switch blinks to the door glass that the power window has not been initialized.

- Method of initialization

Initialize the power window of the each door glass with each seat switch.

The power window of the passenger's seat and the rear seat door glass cannot be initialized with the driver's seat switch.

set-up steps .

1 *Turn on the engine switch.*

2 *Keep pushing the switch below, and open the door glass to the half.*

3 *The door glass is . of close all up ..switch.. continuously can.*

It is possible to continue up the switch after closed all for about one second.

When the initialization of the power window is completed, the operation display light of the switch divides from blinking into lighting.

Contents



Warning

Basic
circuit operationDriving
Handling
deviceThe
Handling indoor
equipmentGood. Safety
of
To
theory/vehicle
and
equipmentHow
to
attention
associate aiming

car

Maintenance



Myriad
One(D)と
め

Index

● How to use of the window lock switch.

It changes into turning on and turning off whenever the window lock switch is pushed. The power windows other than the driver's seat door glass do not open and shut when the switch is turned on. -

When the switch is turned on, the operation display lights of the door glass switch other than the driver's seat door glass switch are turned off.

Window lock switch	Driver's seat switch	Passenger's seat and rear seat switch
ON 	The driver's seat door glass can be opened and shut.	It is not possible to open and shut.
OFF 	All the door glass can be opened and shut.	It is possible to open and shut.



Produce neither hand nor the face from the window while running.

- Produce neither hand nor the face from the window while running. In the worst case, it reaches important injury when it hits the one outside the car etc. or it slams on the brakes or, it is likely to lead to the death. -

Place other people's hand, arm or neither head nor necks, etc. when the door glass is opened and when it closes. It is placed between the door glass and it is rolled, and important injury might be received and it is dangerous. -

Do not let the child operate the door glass. In the worst case, it reaches important injury by the hand, the arm, the head, and the neck's, etc. placing and being rolled when the opened time and closing or, it is likely to lead to the death.



There is an area where the scissors crowding is not perceived in the part immediately before the shutting cutting.

- There is an area where the scissors crowding is not perceived in the part immediately before the shutting cutting to close the door glass surely. Do not place the finger etc. -

It places, it crowds, and the prevention mechanism doesn't operate the switch in the state that was able to continue strongly. Do not place the finger etc. -

When it places by any chance, it crowds, the prevention mechanism operates, and the door glass cannot be closed by the automatic operation, the switch can be closed when it is possible to continue. -

Do not move the switch of the driver's seat switch and other doors in the opposite direction at the same time. It causes the breakdown of the power window. -

After opening completely the door glass closed, all do not keep pushing the switch in be the same direction. It causes the breakdown of the power window.

Contents



Warning


Basic
controls, operationDriving
Handling
deviceThe
Handling indoor
equipmentGood. Safety
of
To
theory, vehicle
and
equipmentHow
to attention
associate driving
car

Maintenance

Myriad
One(D)と
with

Index

Opening and shutting * of Moon roof

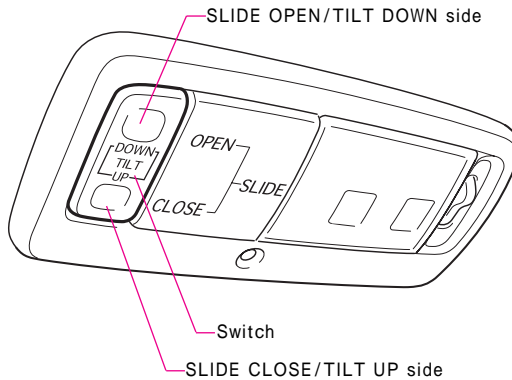

Method of slide opening and shutting

- When opening it

Open by the automatic operation when you push the SLIDE OPEN side of the switch. -

Stop operating once before it opens completely. Open completely when you push the switch again. -

Push the switch again when you stop operating on the way. -

The roof can be opened a little by pushing the switch, and separating the hand at once.

- When closing

When the SLIDE CLOSE side of the switch is pushed, automatic operation and . of close all. -

Push the switch again when you stop operating on the way. -

The roof can be closed a little by pushing the switch, and separating the hand at once.



Method of tilt improvement/down

- When the tilt improves

The tilt must improve by the automatic operation when you push the TILT UP side of the switch when the Moon roof is closed. -

Push the switch again when you stop operating on the way. -

The tilt can improve a little by pushing the switch, and separating the hand at once.

- When the tilt is downed

When the TILT DOWN side of the switch is pushed when the tilt has improved, the tilt is downed by the automatic operation. -

Push the switch again when you stop operating on the way. -

When the switch is pushed, and the hand is separated at once, the tilt can be downed a little.



Produce neither hand nor the face from the Moon roof while running.

- Produce neither hand nor the face from the Moon roof while running. In the worst case, it reaches important injury when it hits the one outside the car etc. or it slams on the brakes or, it is likely to lead to the death. -

Note that other people's neither hand, head nor necks, etc. are placed when you close the Moon roof. It is placed between the Moon roof, and important injury might be received and it is dangerous. -

Is not the waist in the opening or disregard it. The roof dents, and it is thrown out from the car at the emergency, and, in the worst case, it is likely to lead to the death. -

Do not let the child operate the Moon roof. In the worst case, it reaches important injury by placing the hand, the head, and the neck, etc. when closing or, it is likely to lead to the death.



Luggage must not overflow the roof.

- Luggage must not overflow the roof. It might cause an unexpected accident by hitting the one outside the car. -

Time away from the car and confirm the Moon roof is completely closed when you wash a car. Moreover, open it after confirming there are neither water nor a snow on the roof. When rain and water enter indoors, and water splashes to electric parts under audio and the floor carpets etc. , it might cause a fire and the breakdown. -

It places, it crowds, and the prevention mechanism doesn't operate in the state to have kept pushing the switch. Do not place the finger etc. -

There is an area where the scissors crowding is not perceived in the part immediately before the shutting cutting to close the Moon roof surely. Do not place the finger etc. -

Not to keep pushing of the switch to opening completely and close all the Moon roof. It causes the breakdown of the Moon roof.



Knowledge

About the operation condition

When the engine switch is turned on, it is possible to use it.

About the safety feature

The prevention mechanism placing and crowding

The tilt is downed by the automatic operation and operation is stopped when the roof perceives the scissors crowding of the foreign body when closing, it opens by the automatic operation a little, and it stops at time when the Moon roof is closed by the automatic operation. -

Might it place when time when the foreign body was placed and the same impact and the load join the Moon roof according to the environment and the running condition, it crowd, and the prevention mechanism operate. -

When it places due to the breakdown etc. , it crowds, the prevention mechanism operates, and the Moon roof cannot be closed by the automatic operation, it is possible to close by keeping pushing the switch.

About a convenient function

Key OFF latter harvest movement function

After it does, the Moon roof can open and shut about 45 seconds to ..engine switch.. ACC or LOCK. However, the Moon roof cannot be opened and shut when closing once after the driver's seat door will be opened in about 45 seconds.



Knowledge

About the San shade


- Synchronize when you open the Moon roof and open. -
- It is possible to open and shut by hand power.

About the stop function before it opens completely

Stop operating once before it opens completely when you open the Moon roof by the automatic operation. The wind noise becomes small compared with the state of opening completely if running at this position.

About the deflector

The slide is done by the automatic operation and the deflector that prevents the wind being rolled in the room goes up automatically on the Moon roof if it opens it.

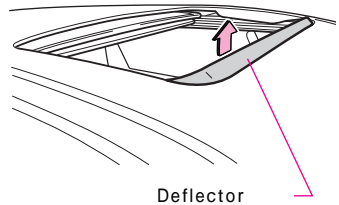

Deflector

About initialization

Initialize the Moon roof when the connection with the battery is refused by the battery exchange etc.-

The following function doesn't operate if initialization is not done.

- 藎 Automatic opening and shutting of Moon roof
- 藎 The prevention mechanism placing and crowding.
- 藎 Key OFF latter harvest movement function

- Method of initialization

1 Turn on the engine switch.

2 Put the Moon roof into the state of the tilt improvement. (Refer to P.135.)


Improve the tilt after of all closes keeping push the SLIDE CLOSE side of the Moon roof switch when the Moon roof is open.

3 Keep pushing the TILT UP side of the switch, and maintain the tilt improvement as it is for about two seconds.



How to use * of the remote control of a wireless door lock.

● Lock and how to unlock door

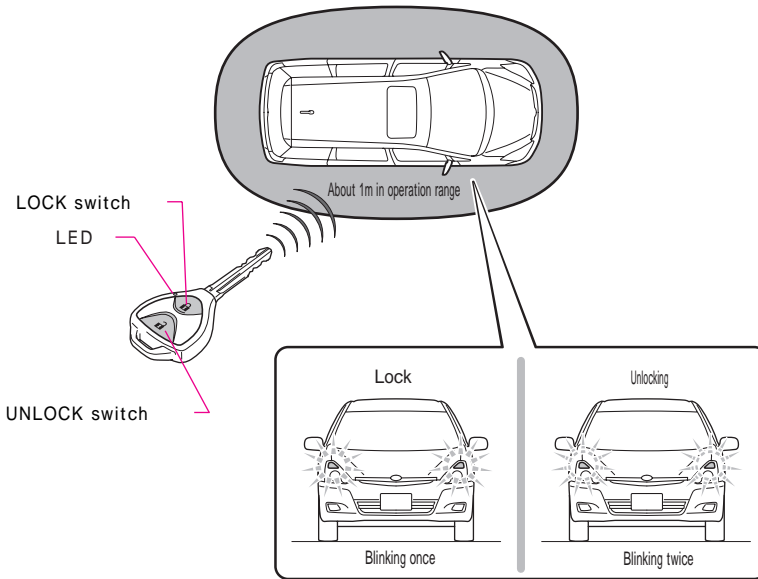

The emergency blinking light (Unlocking : the lock twice once) blinks when all doors (Include the backing door) are locked, unlocked whenever the LOCK switch and the UNLOCK switch are pushed, and operation is completed. -

Push the switch surely slowly. -

LED lights when the switch is pushed. -

Confirm the lock operation was done without fail when you do the lock operation pushing the switch.



Remote control is electronic parts. It causes the breakdown when the high impact etc. are given, and note the following points. -

Do not put it on the place that becomes a high temperature such as on dashboards. -

Do not resolve it. -

Do not drop, and do not give the high impact. -

Do not wet it to water.



Knowledge

About the operation condition

- The distance that can be operated according to surrounding circumstances might change into remote control. Approach from the car to about 1m to operate surely and operate it. -
- The electric wave to the receiver is interrupted when remote control is operated from the rear side of the vehicle when the following one is pasted to the backing door glass and it applies it, the reception sensitivity decreases, and the distance that can be operated might shorten.
- 藪Window film that contains metal.
 - 藪Other metallic things. (antennas etc. other than Toyota pure goods)-
- Neither the LOCK switch nor the UNLOCK switch operate when the key has been inserted in the engine switch or either of door (Include the backing door) is open. -
- Even if it keeps pushing the LOCK switch and the UNLOCK switch, neither the lock nor unlocking the door are repeated. Push the switch again. -
- When the door is not opened within about 30 seconds after the unlocking operation is done pushing the UNLOCK switch, it is locked automatically. (The emergency blinking light blinks once.)

About a convenient function

Eliminateddoentoreshistem(Refer to P.122.)

The lock and unlocking, etc. by remote control synchronize, and a reception desk personal lamp (When the switch is DOO R), the interior light (When the switch is DOOR), and the engine key lighting are lit and turned off.

About the battery exchange

When no neither operation even if remote control is operated or nor L ED when the distance that can be remarkably operated shortens darkens or lights, the consumption of the battery is thought. Change a battery.

If a precise driver on the market is used, the customer can exchange the exchanges of the batteries. Refer to "Battery exchange of the remote control of a wireless door lock" of P.411. (The Toyota shop can exchange it.)

About the loss

Consult the Toyota shop at once to prevent the theft and the accident, etc. when you lose remote control.

About the use

Remote controls can be used up to four in the same vehicle. Consult the Toyota shop in detail.

