 


Yasor a comf

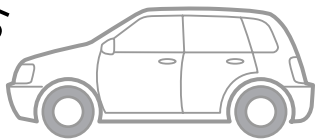

71

### 1. Asking for maintenance execution

Execute maintenance.  
It might lead to a serious vehicle breakdown if it doesn't execute it and is dangerous.



Warning

1.

Asking  
for

maintenance

execution

## Execute maintenance.



- Maintenance in daily life and regular maintenance are obligated to be executed in customer's responsibility by the law.  
Read "Maintenance note" about details of maintenance like the daily check (Refer to P.434) and the periodic check, etc.

慮 The periodic check is a check executed from the viewpoint of securing and the pollution control of safety every 12 months. Appropriate processing of exchanged special maintenance equipment and specified oils and fats and parts and oils and fats etc. are necessary, and consult the Toyota shop about regular maintenance. -


Maintenance is a checkup of the car.

It is the most important for doing a regular check, and the execution of maintenance and the part exchange needed as a result to associate forever with the car. -

For instance, if maintenance is not executed, the inside of the engine might cause burning etc. by lack and the deterioration of the engine oil. Moreover, use that exceeds the use limit (wear-out limit) might not only cause the breakdown but also it relates to the accident about parts that play the role such as the brake pads and the brake disks and wear out. -

Consult the Toyota shop when the daily check, abnormality is found or the condition of the car is bad.

Yasor a comf

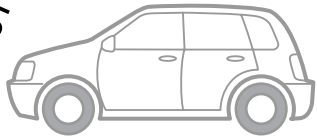

71

2. Attention at the previous state of going out

Defend the following matter before going out.

In the worst case, it reaches an unexpected accident and serious injury if it doesn't guard or, it is likely to lead to the death.



Warning

2.


Attention at the

previous state of going out

## 澆 Never do the engine start outside the window car.

- It might cause an unexpected accident, it is dangerous, and get under the wheel.

## 涵 Do not flap the gas pedal extremely between low the temperature of the engine cooling water.

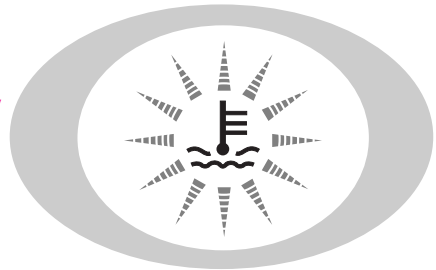

- The catalyst device causes the abnormal combustion by a nonflammable gas in the state of machine shortage, and it is likely to damage it. -

The water temperature warning light (blue) is enough and turning off machine is enough.

## 澆 Confirm all doors have closed surely before it runs.

- It opens suddenly while running if the door is not surely closed the door, might cause an unexpected accident, and is dangerous. The half door warning light (Refer to P.277) lights when either of door (Include the backing door) is not surely closed.



Warning

2.


Attention  
at the  
previous  
stage  
of going  
out

**潜** Remove when the snow and the fallen leaf, etc. are attached to the air intake at the front of the windshield.




- View might worsen by the glass's humidity's in the car such as rain it becoming impossible to ventilate enough in the car because air cannot be introduced, going up, and becoming cloudy.

**潜** Confirm fixation surely when you adjust the handle position while stopping.

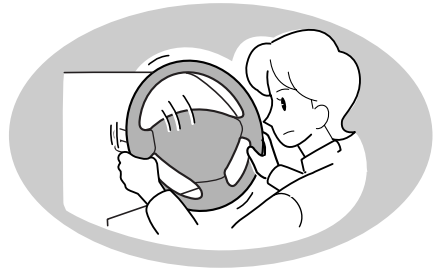

- If the fixation of the steering wheel is insufficient, it divides as the position of the steering wheel is sudden, might cause an unexpected accident, and is dangerous while running.


**注意** Do not put the one under one's driver's seat feet and the driver's seat.

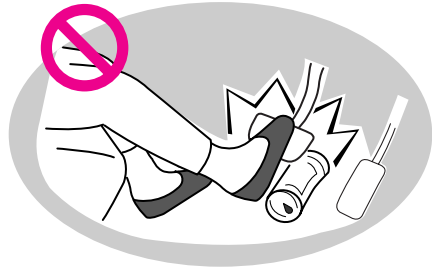


- It narrows in the brake pedal and the gas pedal when there are an empty can etc. , and the brake cannot be operated, and it might cause an unexpected accident as the gas pedal doesn't return and is dangerous. Moreover, it is disturbed the movement of the seat, and cannot fix the seat, might cause an unexpected accident, and is dangerous.

**注意** Do not use the floor mat not suitable for the car.

- The floor mat might cause an unexpected accident by the return's of the gas pedal correctly not paving, becoming an obstruction of the operation of the brake pedal if the floor mat is paved repeatedly, and worsening and is dangerous.

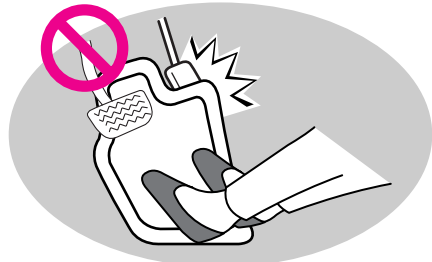

- Pave what suitable for the car correctly. Moreover, fix with a fixed clip etc. so as not to shift. The hole of the carpet is for the fixed clip installation used to prevent the Toyota pure floor mat from shifting.

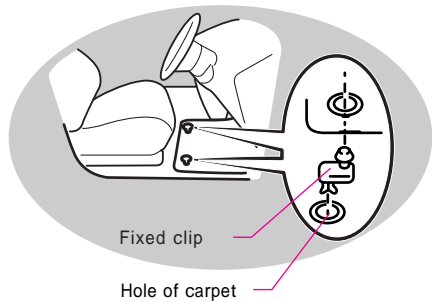



Warning

2.

Attention  
at the  
previous  
state  
of going  
out

**潜** Do not pile luggage to the passenger's seat and the rear seat.



- It dashes out when time that slammed on the brakes and the car are turning luggage, might cause an unexpected accident by the nature's hitting the crew, damaging luggage, and being taken in luggage, and is dangerous. -

Put luggage in a steady state (For instance, to evenness forward of the luggage room) to the luggage room. The deck hook installation car must fix luggage if necessary with the net and the rope, etc. with a deck hook of the luggage room. (Refer to P.337. )

**潜** Pile up neither container nor the spray can that the fuel enters, etc.




- It ignites at the emergency, might connect with a vehicle fire, and is dangerous.

**潜** Confirm the bonnet has been surely locked before it runs when it opens the hood and you work.

- It opens when running without locking the bonnet, might cause an unexpected accident, and is dangerous.

**潭**In the following cases, the car might be out of order. The adverse effect is caused for running, and it might cause an unexpected accident and is dangerous when leaving just as it is. Receive the check in the Toyota shop.

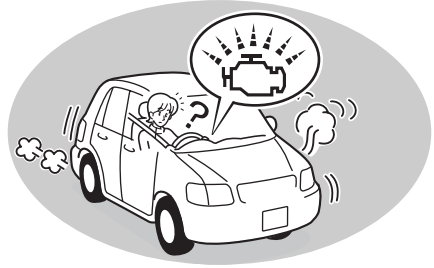

- When a sound, a smell, and a vibration different from always are. -
- When you feel abnormality in the steering wheel control. -
- When the brake liquid is insufficient. -
- When it remains after oil leaks to ground. -
- When abnormality is found in the meter, the display light, the warning light, and lamps.

**激**Never do driving that drinks sake.



- Drunken driving is prohibited by the law. -
- Drunken driving exerts the influence on the judgment power, eyesight, and the attention power, might cause a serious accident, and is dangerous also in very danger, and very small amount alcohol.

**撞**Confirm in the body below the floor level in the engine room, there are no animals of small size of the cat and the rat, etc.

- It might cause the function trouble by animals of small size' being rolled in the fan and the belt when the engine starts.

 


Warning

2.

Attention at the

previous state of going out

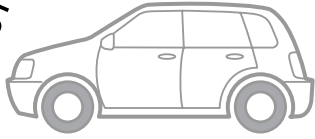

71

### 3. Attention at fueling

Defend the following matter when you replenish the fuel. Important injury might be received if it doesn't guard and it is dangerous.



Warning


3.

Attention

at

fueling


**油** Do not use the fuels other than specification.

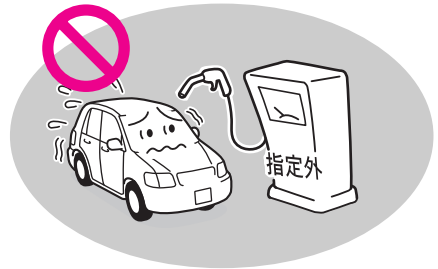

- A specified fuel is nonlead regular gasoline. Confirm the fuel specified when refueling. -

The start of the engine might worsen, the knock be generated, and the output decrease if the fuels (inferior gasoline, kerosene, and alcohol system fuel, etc.) other than specification are used. As it is..use..accident to the engine..fuel..part..damage..fuel..leak..cause..specification..fuel..excluding..use.

## Guard the following at fueling.

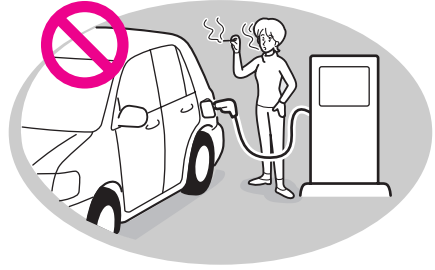

- The engine must stop. -
- Close the car door and the window. -
- Do not bring the fire such as cigarettes close. -
- Remove the static electricity of the body touching a metallic part such as bodies before the refueling operation is done when the Fuelrid fuel cap is opened. It is likely to ignite to the fuel by the spark by the electrical discharge if static electricity has been worn, and the burn might be done to the body. -

Have the switch of the cap without fail, and open it slowly when you open the fuel cap.

The fuel blows from the refueling entrance when pressure in the fuel tank has risen when the temperature is high etc. and it is likely to return it.



Do not open it any more when the sound "Hiss" is heard to a little loosening the fuel cap.

Open it slowly after the sound stops.

- Do not touch the person and the one that returns to the seat in the car again while refueling, and is electrified (There is fear of re-electrification).
- Do not bring anyone other than the person who removes static electricity close to the refueling entrance.
- Confirm the loincloth surely closed right when the fuel cap is closed after refueling ends until "Catitsu" and the sound are heard. -

Do not use it excluding the fuel cap of pure Toyota suitable for the car. -

Additionally, defend notes posted in the gas station.

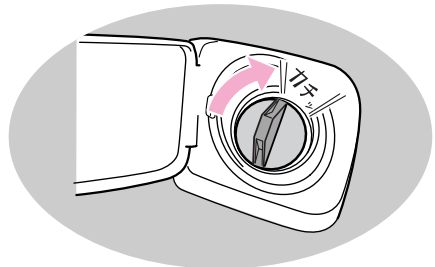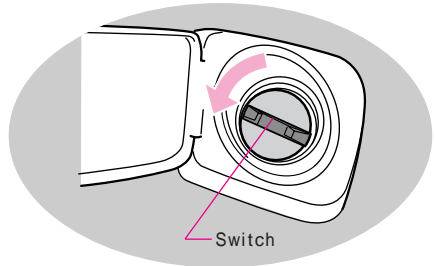

## Do not breathe in the evaporating fuel when you refuel.

- Note that in the element of the fuel, there is the one that contains the poisonous substance, too.



Warning

3.

Attention

at

fueling