

How to use * of a smart door lock.

It is necessary to be able to do by a smart door lock.

- Lock and unlocking of door by smart door lock function Refer to next page.
- Lock and unlocking of door by wireless door lock remote control function Refer to P.143.



Lock the door after confirming being sure to put the parking brake, pulling out the key from the engine switch, it not to be in the car room the smart key, and the carrying of the smart key and when parting from the car.



Knowledge

About the smart door lock function



The system that locks the door and can unlock it without using the key when the smart key and the vehicle automatically collate the ID code when the smart key (Refer to next page) is carried, and it enters the range of operation of auto outdoor transmitter *, and collation is corresponding.

- Compare the ID code from the vehicle and the ID code from the smart key.

About the range of operation


Enter the following range of operation to operate surely and operate it.

- Range of operation of smart door lock function
- Range of operation of wireless door lock remote control function

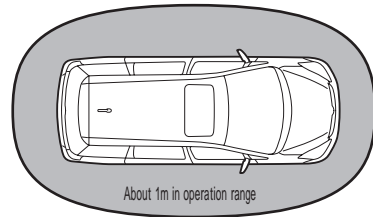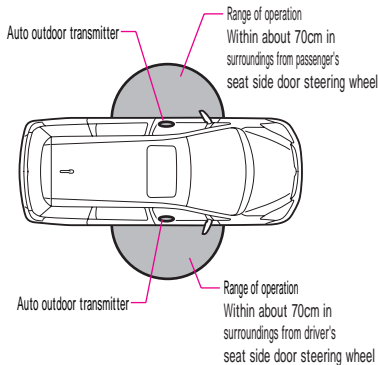

- Contents
- Warning
- Basic system operation
- Driving Handling device
- The Handling indoor equipment
- Good Safety of To theory (vehicle and equipment)
- How to attention associate driving car
- Vehicle
- Myriad One(D)
- Index

Lock and how by smart door lock function to unlock door

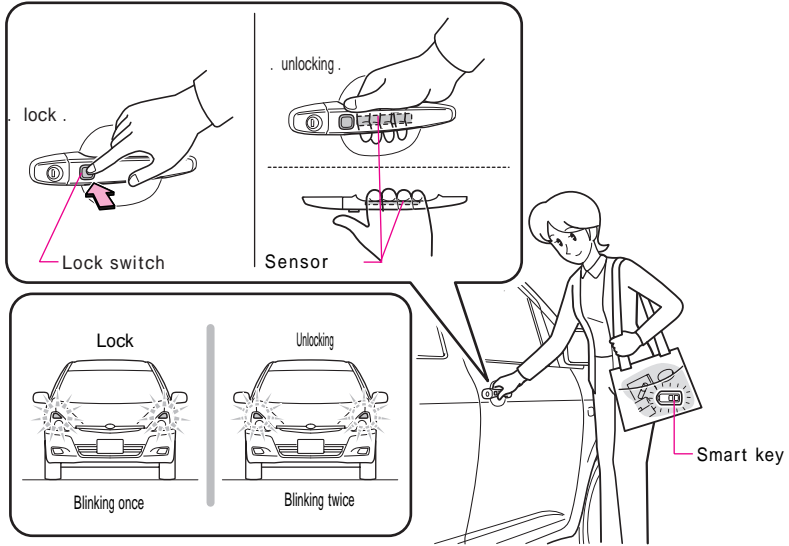

- The above figure is an illustration operated from the driver's seat side.

- When locking

- Carry the smart key, and push the lock switch of the reception desk door steering wheel. -
- All doors (Include the backing door) can be locked. -
- The emergency blinking light blinks once when locking.

- When unlocking it

- Grip the door handle to carry the smart key, and to touch the sensor in the reception desk door steering wheel. -
- All doors (Include the backing door) can be unlocked. -
- The emergency blinking light blinks twice when unlocking it.

Knowledge

About the operation condition

The lock and unlocking the door become possible only when the ID code is automatically collated, and collation is corresponding when entering carrying the smart key within the range of operation of auto outdoor transmitter (Refer to last page). -
 It is likely not to operate normally when smart keys are in the neighborhood and a high place on ground even in case of being in the range of operation.

About the lock and unlocking

- If the smart key is in the range of operation of auto outdoor transmitter, it is possible to lock and to unlock it with the reception desk door steering wheel excluding the person who is carrying the smart key. -

Confirm the lock surely pushing the lock switch of the reception desk door steering wheel when you lock. -

The lock switch is ..earliness.. O and it is likely not to be locked when doing. -


When the key has been inserted in the engine switch, it is not possible not to lock and to unlock it by using the smart door lock function. -

It is not locked even if the lock switch is pushed when either of door (Include the backing door) is open. -

After it locks, about three seconds cannot be unlocked by using the smart door lock function. -

The unlocking operation by the smart door lock function cannot be done when locking by operating the key. In that case, unlock it by operating the wireless door lock remote control function or the key. -

Pull the door handle after confirming the grip of the sensor in the reception desk door steering wheel surely, and unlocking when you unlock it.

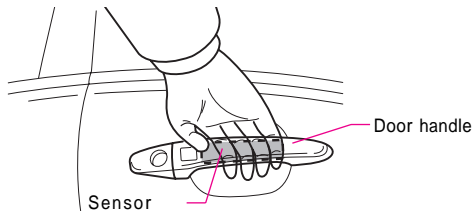

- When the leather glove and the skiing gloves, etc. are installed in the hand and it touches the reception desk door steering wheel, unlocking might not be delayed, and it be unlocked. -


Grip the reception desk door steering wheel within about five seconds after the smart key enters the range of operation of auto outdoor transmitter to make it surely unlock. When five seconds pass, it is likely not to operate. -



In an approach of a sudden auto outdoor transmitter to the range of operation and a sudden door steering wheel control, it is not likely to be able to unlock it. In that case, pull the door handle again after confirming the door handle returns to the position, and was unlocked never. -

It will be locked automatically in about 30 seconds if there is no opening and shutting operation of the door after it unlocks it. (The emergency blinking light blinks once.)-

It will be locked automatically in about 30 seconds if there is no opening and shutting operation of the door though the smart door lock function might work when bags of water hang to the door handle because of the carwash and the heavy rain, etc. when the smart key is in the range of operation of auto outdoor transmitter, and the door unlock it.

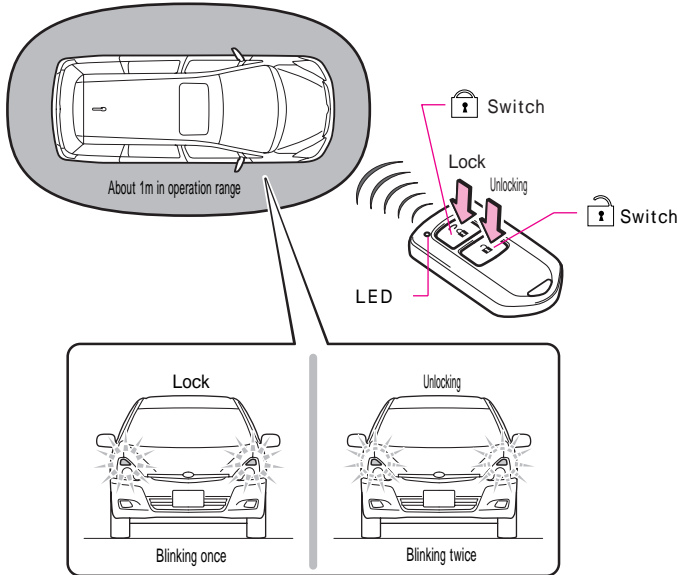Method of lock and unlocking by wireless door lock remote control function



-  When the switch is pushed, all doors (Include the backing door) are locked.
 -  When the switch is pushed, all doors (Include the backing door) are unlocked. -
- The emergency blinking light blinks once when locking.

The emergency blinking light blinks twice when unlocking it. -


Push the switch surely slowly. -



LED lights when the switch is pushed. -


Confirm the lock operation was done without fail when you do the lock operation pushing the switch.

About the operation condition

- The wireless door lock remote control switch doesn't operate when the key has been inserted in the engine switch. -

 The switch doesn't operate when either of door (Include the backing door) is open.

-  SwitchEven  if it keeps pushing the switch, neither the lock nor unlocking the door are repeated. Push the switch again. -

 When the door is not opened within about 30 seconds after the unlocking operation is done pushing the switch, it is locked automatically. (The emergency blinking light blinks once.)-

The distance that can be operated according to surrounding circumstances might change into the wireless door lock remote control switch. Approach from the car to about 1m to operate surely and operate it. -

The electric wave to the receiver is interrupted when remote control is operated from the rear side of the vehicle when the following one is pasted to the backing door glass and it applies it, the reception sensitivity decreases, and the distance that can be operated might shorten.

蘆Window film that contains metal.

蘆Other metallic things. (antennas etc. other than Toyota pure goods)



The electric wave might exert the influence on an electric equipment for the medical treatment like the heart pacer etc. Confirm it to an electric equipment manufacturers for the medical treatment etc. beforehand.



Smart keys are electronic parts with built-in signal transmitter. It causes the breakdown, and guard the following. -

Do not put it on the place that becomes a high temperature such as on dashboards. -

Do not resolve it. -

Do not torture, do not drop, and give the high impact. -

Do not wet it with water. -

Do not apply the key ring etc. that wear magnetism. -

Do not put it near a medical treatment electric equipment such as the equipment or the low frequency therapeutic instrument machines that wear the magnetism such as the television audio. -

Do not wash it with the ultrasonic washing machine etc.-

The smart key might be transformed, and crack when the fuel, the Tsuya putting out medicine such as gasoline, and oils and fats adhere to the smart key.



Knowledge

About the operation condition

- A smart door lock uses a slight electric wave. In the following cases, the smart key and the communication between vehicles are disturbed, and it is not likely to be able to operate it by the smart door lock function and the wireless door lock function. In that case, operate it with the key (Refer to P.116).

蘆 When there is equipment that generates a strong electric wave such as the television tower, the power plant, broadcasting stations, and airports to be near.

蘆 When you carry wireless telecommunications equipments such as the wireless machines and cellular phones together.

蘆 When the smart key touches the metallic one or is covered.

蘆 When is to be near two or more smart keys.

蘆 When you put the smart key near electrical appliances such as personal computers.

蘆 When you use the remote control of a wireless door lock in the vicinity. -

When cutting, the smart key cannot operate the battery by the smart door lock function and the wireless door lock function. In that case, operate it with the key (Refer to P.116).

About a convenient function

Ilminateddoentoreshistem(Refer to P.122.)

The lock and unlocking, etc. by a smart door lock or remote control synchronize, and a reception desk personal lamp (When the switch is DOOR), the interior light (When the switch is DOOR), and the engine key lighting are lit and turned off.



About the power saving function

When the door is locked when the engine stops, auto outdoor sending is regularly done in a smart door lock. Therefore, the battery of the vehicle might go up when the vehicle is left for a long time. Moreover, the consumption of the battery of the smart key and the battery of the vehicle might go up when the smart key and the vehicle are left for a long time in the state to communicate regularly when the smart key is always put within the range of operation of auto outdoor transmitter (Refer to P.140). Then, do the following control automatically to prevent consumption and the battery rising of the battery of the smart key. -

Stop the smart door lock function when there is no response from the smart key for 15 days or more or is a smart key within the range of operation of auto outdoor transmitter for ten minutes or more.

Do either of following operation when you return the smart door lock function. -

Carry the smart key, push the lock switch of the reception desk door steering wheel, and do the lock operation. -

It approaches the vehicle, switches of  the smart key are pushed,  either of the switch is pushed, and Hodoco.

Do the lock or the unlocking operation. (Refer to P.143.)-

Start the engine.



About keeping the smart key

Do not keep the smart key near the television, the personal computer, and the home appliance such as electromagnetic cookers. The smart key mis-operates by the electromagnetic radiation of home appliance, and it always enters the state of the communication and the battery is consumed remarkably.

About the cancellation of the smart door lock function

The smart door lock function can be canceled. Consult the Toyota shop in detail.

About the battery exchange

The smart key always does the reception operation for the communication with the vehicle, and consumes the battery with built-in the key (battery). About 1-3 years though the battery longevity depends on the usage condition. (Consume it even when not using it at all.)In the following cases, the consumption of the battery is thought. Change a battery. -

When it becomes difficult to operate the smart door lock function. -

When no operation even if the switch is pushed, and the distance that can be remarkably operated shorten. -

When LED darkens or doesn't light even if you push the switch.

We will encourage the exchange in the Toyota shop by the exchange of the batteries because there is fear of damage etc. when exchanging it though it is possible to exchange by the customer (Refer to "Battery exchanges of smart keys of a smart door lock" for P.413).

About the loss

Consult the Toyota shop at once to prevent the theft and the accident, etc. when you lose the smart key.

About the use number

Smart keys can be used up to four in the same vehicle. Consult the Toyota shop in detail.

MEMO

Contents



Warning

Basic
controls, operation

Driving
Handling
device

The
Handling indoor
equipment

Good Safety
of
To
theory/vehicle
and
equipment

How
to
attention
operate driving
car


Maintenance


Myriad
One/D
C
with

Index


Opening and shutting of Fuelrid (fueling entrance)

● Opening and shutting of Fuelrid

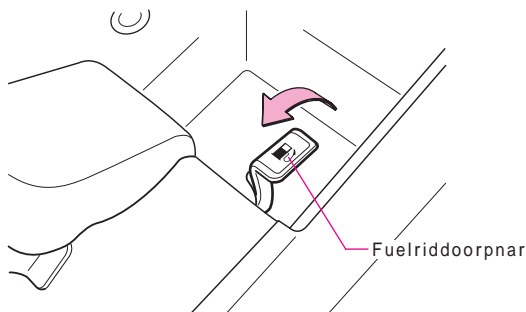


Open when you pull Fuelriddoorpnar () under the  right of the driver's seat. When closing, Fuelrid is closed to the place where "Catitsu" and the sound are heard with the hand.

● Opening and shutting of fuel cap

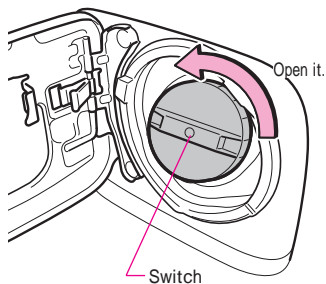


- When opening it
Have the switch of the cap, spend in the left, and open it.

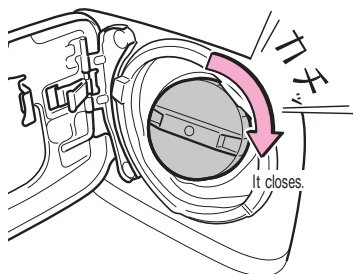

- When closing
It spends in the right until it has the switch of the cap, and "Catitsu" and the sound are heard and it closes.



● Location of fuel cap

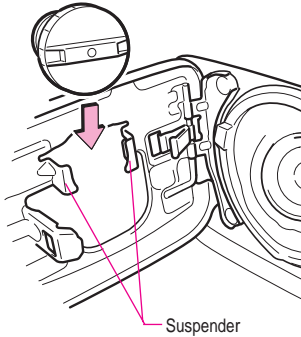

Put the fuel cap in the suspender while refueling.



警告

Guard the following at fueling.

- Guard the following at fueling.
 - 蘆 Stop the engine.
 - 蘆 Close the car door and the window.
 - 蘆 Do not bring the fire such as cigarettes close.
 - 蘆 Remove the static electricity of the body touching a metallic part such as bodies before the refueling operation is done as Fuelrid and the fuel cap are opened. It is likely to ignite to the fuel by the spark by the electrical discharge if static electricity has been worn, and the burn might be done to the body.
 - 蘆 Have the switch of the cap without fail, and open it slowly when you open the fuel cap. The fuel blows from the refueling entrance when pressure in the fuel tank has risen when the temperature is high etc. and it is likely to return it. Do not open it any more when the sound "Hiss" is heard when the fuel cap is loosened a little. Open it slowly after the sound stops.
 - 蘆 Do not touch the person and the one that returns to the seat in the car again, and is electrified while refueling. (It is likely to electrify again.)
 - 蘆 Do not bring anyone other than the person who removes static electricity close to the refueling entrance.
 - 蘆 Confirm the loincloth surely closed right when the fuel cap is closed after refueling ends until "Catitsu" and the sound are heard.
 - 蘆 Do not use it excluding the fuel cap of pure Toyota suitable for the car.
 - 蘆 Additionally, defend notes posted in the gas station.
- Do not breathe in the evaporating fuel when you refuel. Note that in the element of the fuel, there is something that contains the poisonous substance.



Do not use the fuels other than specification.

- A specified fuel is nonlead regular gasoline. Confirm the fuel specified when refueling. -

The start of the engine might worsen, the knock be generated, and the output decrease if the fuels (inferior gasoline, kerosene, and alcohol system fuel, etc.) other than specification are used. As it is..use..accident to the engine..fuel..part..damage..fuel ..leak..cause..specification..fuel..excluding..use. -

Do not spill the fuel in the car while refueling. Paintwork might be violated.



About the position of Fuelrid


Fuelrid (fueling entrance) is behind the passenger's seat side vehicle.

About the capacity of the fuel tank


The capacity of the fuel tank is about 60L.

Opening and shutting of bonnet


How to open it

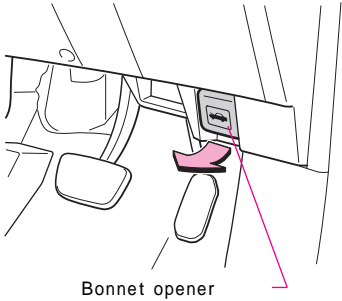

- 1 Pull the bonnet opener.
The bonnet comes to the surface a little when the bonnet opener under the right of the driver's seat Instrument panel is pulled.

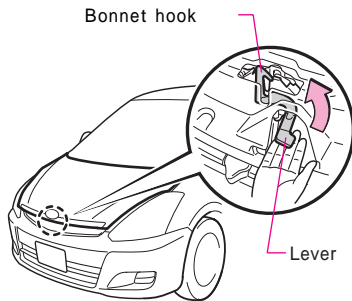

- 2 Remove the bonnet hook.
Put the hand in the space of the bonnet, push up the lever, remove the bonnet hook, and lift the bonnet.

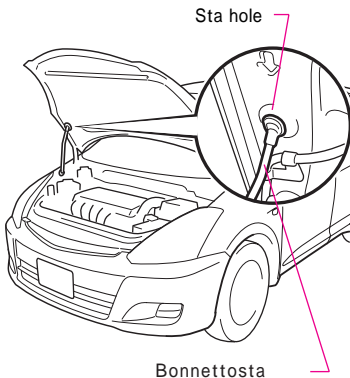

- 3 Insert Bonnettosta.
Insert Bonnettosta in the Sta hole and support the bonnet.

Contents



Warning

Basic
controls, operationDriving
Handling
deviceThe
Handling/indoor
equipmentGood. Safety
of
To
theory/controls
and
equipmentHow
to
attentionAssociate
handling
car

Maintenance

Myriad
One/D7
m

Index

How to close

- 1** Remove Bonnettosta.
Remove and fix Bonnettosta.
- 2** It closes the bonnet.
The bonnet is quietly dropped from the position of about 20-25cm and it closes.
- 3** Confirm the lock.
Confirm the shake of the former edge of the bonnet up and down, and the lock surely.



警告

It opens when running without locking the bonnet, might cause an unexpected accident, and is dangerous.



注意

Do not place the hand etc. when the bonnet is dropped and it closes.

- Do not place the hand etc. when the bonnet is dropped and it closes. -
- Do not push strongly by putting weight when closing the bonnet. The bonnet might dent. -

Insert it in the Sta hole with the resin part of Bonnettosta when opening the hood after it runs for a long time. Because Sta is hot when having it excluding the resin part, the burn might be done.

