 



How to drive automatic car

Method of start


Method of start usually

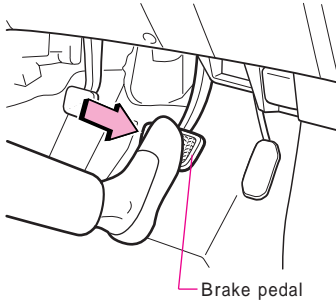

 - 1 The gear-shift with stepping on the brake pedal firmly by the right leg 綺麗..putting... Do.

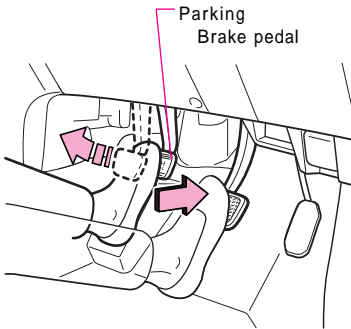

- 2 Release the parking brake with the left leg. Refer to P.246.

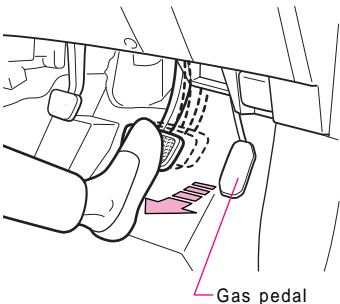

- 3 Slowly step on the gas pedal by the right leg after gradually loosening the brake pedal and start.



How to start acclivity

- 1 The gear-shift after confirming the parking brake hangs firmly 綺P u t .
- 2 Step on the gas pedal by the right leg slowly.
- 3 Release the parking brake with the left leg after confirming the feeling where the car begins to move, and start.



Operate the gear-shift with stepping on the brake pedal firmly.

- Operate the gear-shift when you start with stepping on the brake pedal firmly. Especially, step on more unflinching and the brake pedal so that the creep phenomenon may strengthen when immediately after the engine start and the air conditioner operates. -

It is not necessary to make a mistake in stepping confirming the position of the brake pedal and the gas pedal without fail when you drive. The car starts rapidly when the gas pedal is mistaken for the brake pedal and it steps, it causes an unexpected accident, and it reaches important injury or, in the worst case, it is likely to lead to the death. -

Never do the gear-shift operation by having depressed the gas pedal.

It starts rapidly by the car, might cause an unexpected accident, and is dangerous.

Method of running

● Usual running

The gear-shift 綺 It runs with put. -

Accelerate and decelerate only by operating the accelerator and the brake.

● To accelerate rapidly

Depress the gas pedal fully. It ..kicking down doing.. accelerates rapidly.

● When you run on the slope

- Acclivity

1.8L car(FF car)

The engine rotation might go up suddenly the down of the kick doing if the gas pedal is depressed.

The gear-shift if necessary 絲 The change in the engine rotational speed can be suppressed by making it to three velocities or two velocities.

1.8L car(4WD car)

The engine rotation might go up suddenly the down of the kick doing if the gas pedal is depressed.

The gear-shift beforehand 筈 O r , 筈 Strangeness of and engine rotational speed Can be suppressed turning.

2.0L car(G grade)

The gear-shift according to the inclination 絲 A smooth running that the change in and the engine rotational speed is few can be done.

2.0L car(Z grade)

The gear-shift 絢 A smooth running can be done by running in the changing the speed steps corresponding to and the slope.

Contents

Warning

Basic car's operation

Driving Handling device

The Handling indoor equipment

Good Safety of To theory/online and equipment

How to attention associate driving car

Vehicle

Myriad One(D)

とき

Index

- Downward slope

Working of the brake might worsen when the service brake is used too much.

The gear-shift 綺 When the speed goes out too much by

1.8L car(FF car)

The gear-shift 絲 It runs, three velocities or two velocities.

1.8L car(4WD car)

The gear-shift according to the slope 筵 Or, 綯 Use the engine brake together.

The gear-shift 筵 Light engine brakes are the profits according to.

2.0L car(G grade)

The gear-shift 筵 Use the engine brake together.

- 絲 A light engine brake is obtained by.

2.0L car(Z grade)

The gear-shift 綯 The engine brake is used together in the changing the speed steps corresponding to and the slope. Do.



The gear-shift while running 縣 Do not put.

- The gear-shift while running 縣 Do not put. It might cause an unexpected accident because the engine brake doesn't work at all and is dangerous. -

The gear-shift while running to advance 緘 Do not put. The wheel locks and an unexpected thing. Therefore, it might connect and is dangerous. Moreover, impossible power joins an automatic transmission, and it is likely to break down. -

Operate the brake pedal by the same right leg as the gas pedal. The brake operation by the left leg might cause an unexpected accident as the reaction in the emergency is delayed and is dangerous. -

The gear-shift in 1.8L car (FF car) on the slope etc. 綺・絲, 1.8L car(4WD car)

Then, 綺・筵・筵・綯, In 2.0L car (G grade) 綺・絲, 2.0L car(Z grade)

Then, 綺・綯 It retreats with. 緘 Advancing with is an absolute mother-of-pearl.

Do not be. It stalls, it might cause a breakdown and an unexpected accident by the steering wheel's working of the brake worsening, and becoming heavy, and it is dangerous.



The gear-shift 縣 It might cause the breakdown of the transmission when running to.

Method of stop

- 1 It pulls up a car. The gear-shift 綺The brake pedal by and the right leg Step firmly.
The air conditioner operates intermittently by the temperature change. The idol improves automatically, the creep phenomenon strengthens while operating, and note that the car doesn't begin to move especially.
- 2 Put the parking brake if necessary.
Power to which the car tries to retreat grows more than try advanced power ahead by the creep phenomenon, and the car might retreat to the stop in the acclivity.
Firmly step on the brake pedal by the right leg, and put the parking brake with the left leg firmly.
- 3 The gear-shift when stopping for a long time 線Or, 縣Put .



Method of parking

- 1 Stop the car completely.
- 2 Put the parking brake.
Put the parking brake with the left leg firmly with stepping on the brake pedal firmly by the right leg.
- 3 The gear-shift 線P u t .
So that the car doesn't begin to move線P u t .
- 4 Stop the engine.
Stop the engine without fail, and lock the door when parting from the car.

**警告****The gear-shift while running 線Do not put.**

- The gear-shift while running 線Do not put. Automatic transmission
It drinks, is locked Uti mechanically, might cause an unexpected accident, and is dangerous. -
- Do not rev while stopping. The gear-shift 線・ 懸It is, and the car is a rapid departure.
It might connect and is dangerous in the accident of „advancement.. not trowed.


**注意****Stop the engine without fail and lock the door when parting from the car.**

- When it is left to start up an engine, the gear-shift : by any chance. 線Cri at a certain time.
The car in the P phenomenon begins to be likely to move automatically, and when depressing it, to start the gas pedal rapidly by mistake. -
- Step on the gas pedal and the brake pedal at the same time, and the gear-shift in the acclivity 綺のまま
Do not stop the accelerator though it is deep. An automatic transmission overheats,
and it causes the breakdown.

How to use of the parking brake pedal.


Handling of parking brake pedal

● To put the parking brake

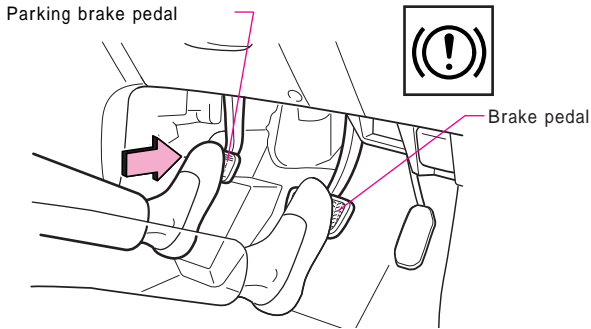

Depress the parking brake pedal with the left leg fully while firmly stepping on the brake pedal by the right leg. -
The brake warning light lights.

● To release the parking brake

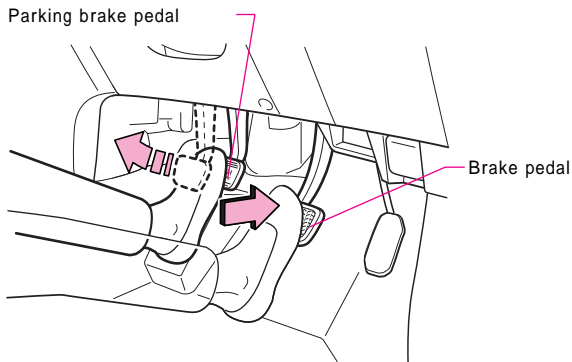

Depress the parking brake pedal with the left leg while firmly stepping on the brake pedal by the right leg until "Catitsu" and the sound are heard, and separate slowly. -
The brake warning light is turned off.



Do not run with the parking brake put. The brake parts are worn out early, and the brake overheats and effective might worsen.



Knowledge

When putting it again

Step again after it releases it once when you want to put after the parking brake is put again.

Contents



Warning

Basic
causes, operation

Driving
Handling
device

The
Handling indoor
equipment

good. Safety
of
To
theory/vehicle
and
equipment

How
to
attention
associate driving,
car

Maintenance

Myriad
One/D

 
と
with

Index


View of meter, display light, and warning light

Meter

Optitoromatar

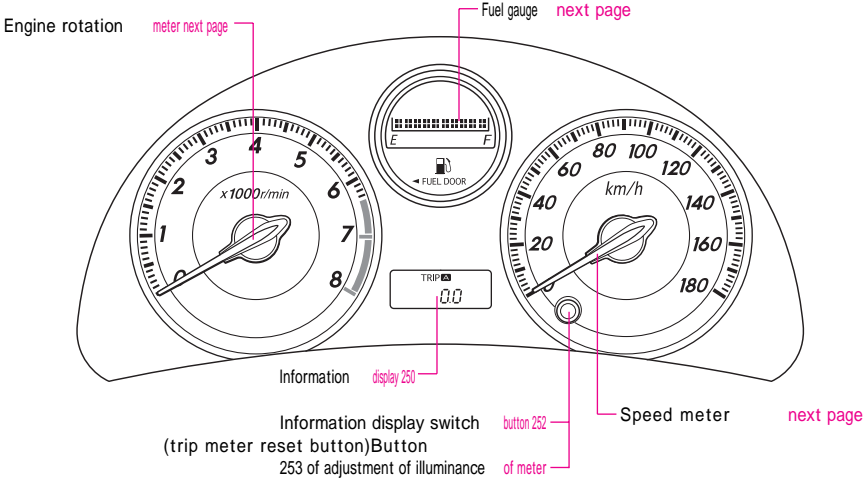

Analog meter

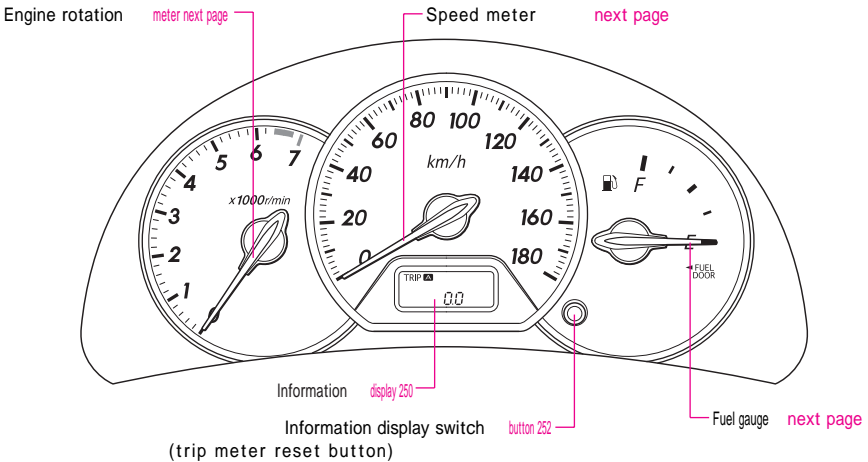 

Knowledge

About the meter

When the engine switch is turned on, the indicator in the meter is not abnormal though are for a short time about 0 scale slight movement situation.



Fuel gauge

When the engine switch is turned on, the amount of the fuel remainder is shown.
The capacity of the fuel tank is about 60L.



Knowledge

About the fuel gauge

- The indicator might touch an analog meter so that the fuel in the tank may move in the slope and the curve, etc.-

After fueling, it takes while it is a few until the instruction is steady. -

When the engine switch replenishes the fuel as turning on, a correct amount of the fuel remainder cannot be displayed. -

It is in the fuel gauge. ◀ FUEL DOOR In the sign, Fuelrid (fueling entrance) is passenger's seat side vehicle rear.
Is shown.

Speed meter

The running speed of the vehicle is shown.

Engine rotation meter

The engine rotational speed of per minute is shown.

**注意**

Drive so that the indicator should not enter Red Zone (range to have exceeded a permissible rotational speed of the engine). The engine etc. are influenced harmfully when driving that the indicator enters Red Zone is continued, and it is likely to damage it.



Knowledge

About the check on the engine system of 2.0L car


The changing the speed ratio of the transmission might be changed for the check on the engine system while running a constant speed, and engine revolutions be raised. However, there is no change at the speed of the vehicle.



Information display


Do the following display when you turn on the engine switch.

- Odometer

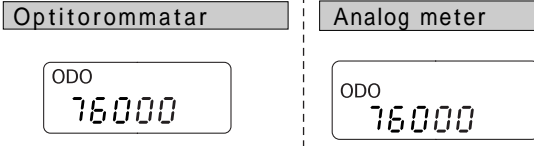


Display a total distance where it runs by the unit of km.

- Trip meter

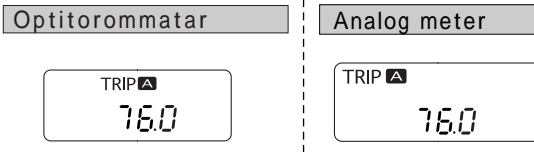


Display two kinds of section distances (trip A and trip B) by the unit of km.

- Illuminance adjustment

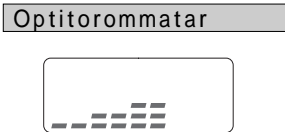

The brightness level of meter set lighting is displayed. (Refer to P.253.)

- Fuel cost at moment(km/L)

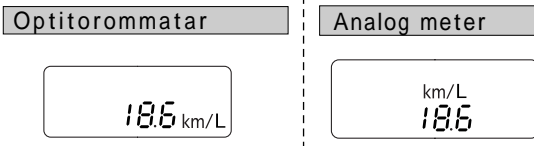

Display fuel cost after the engine is started, and running begins momentarily. - When stopping, "0.0km/L" is displayed.

- Average fuel cost(km/L)

Optitorommatar


 TRIP  AVG.
16.7 km/L

Analog meter

 


 TRIP  AVG.
16.7 km/L

Update every about ten seconds and display the average fuel cost after trip A is reset in 0. -

When the connection with the battery is refused, "0.0km/L" is displayed.

- Velocity of average car(km/h)

Optitorommatar


 TRIP  AVG.
89.6 km/h

Analog meter


 TRIP  AVG.
89.6 km/h

Update every about ten seconds and display the velocity of the average car when you turn on the engine switch after trip A is reset. -

When the connection with the battery is refused, "0.0 km/h" is displayed.

Contents



Warning

Basic
controls, operationDriving
Handling
deviceThe
Handling indoor
equipmentGood. Safety
of
To
theory, vehicle
and
equipmentHow
to attention
associate driving
car

Maintenance

 
Myriad
One(D)と
め

Index

 Information display switch button
(trip meter reset button)

- How to switch information display

The display changes as follows whenever the switch button is pushed.

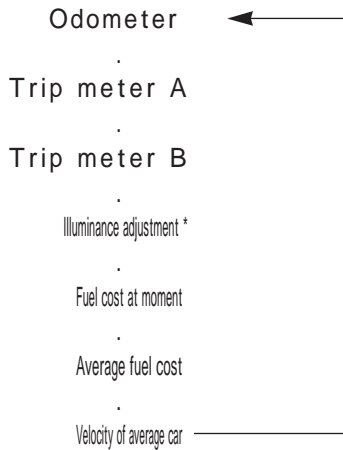

- Only Optitorommatar is displayed.

- When you return the trip meter to 0(0)

Keep pushing trip meter reset button after making wanting doing to 0 of trip meter A and trip meter B displayed until the display becomes 0.

When the connection with the battery is refused, the trip meter becomes 0.



● Button of adjustment of illuminance of meter

Optitorommatar

- Method of illuminance adjustment

1 Switch the information display to the illuminance adjustment screen.
Refer to last page.

2 Keep pushing the button for about one second or more while displaying the illuminance adjustment screen.
The frog can do the brightness level of meter lighting as shown in the table below. -
Separate the hand from the button when becoming the brightness of the favorite. -
When the light is turned off and it lights, each brightness level can be set.

Brightness level		When light is turned off	When light lights
It is bright. It is dark.	1 2		
	3		
	4		
	5		
		—	

- When the light is lit, no do decrease in lights of meter lighting when setting it to level 1.



Knowledge

About the operation condition of meter lighting

Light when you turn on the engine switch, and turn it off when making it to ACC or LOCK.