 


How to use of the switch.

How to use of the light switch.

How to use * of Conrait.

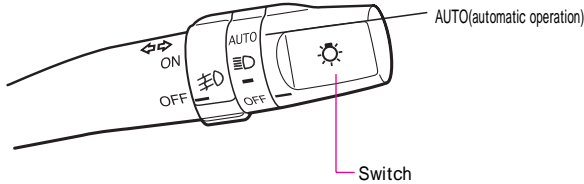

When the switch is spent in AUTO, the headlamp and the front position light, etc. are lit and turned off by the automatic operation in proportion to surrounding brightness. -

Turn it off automatically when the engine is stopped, and the driver's seat door is opened. Light again when you turn on the engine switch.

Knowledge

 
About the operation condition

When the engine switch is turned on, it is possible to use it.

About Conraitosensar

- Sensitivity can be adjusted and consult the Toyota shop when feeling that lighting and turning off the lamp when it uses it by the automatic operation are early or are slow. -

The sensor might not operate normally when the one is put on the sensor of Conrait or the glass cleaner etc. are sprayed.


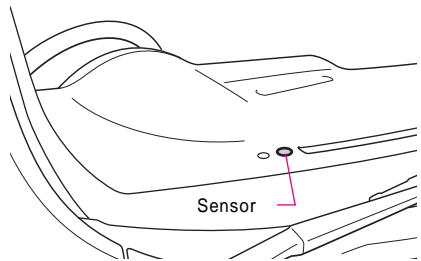


- Contents
- Warning
- Basic series operation
- Driving Handling device
- The Handling indoor equipment
- Good Safety of To theory/outline and equipment
- How to attention associate aiming car
- Notice
- Myriad One(D)
- 七
- Index

Lighting and turning off of lamp

Conrait installation car

  Exclude the Conrait installation car.

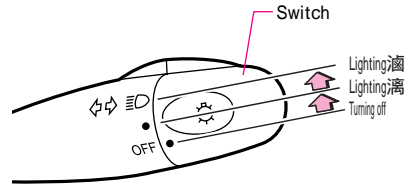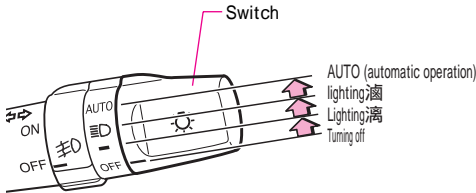

Position of switch	Lighting lamp
Lighting	Front position light, taillight, number-plate light, and meter lighting *. each switch lighting
Lighting	Lighting + headlamp of ..drinking.. lamp

- Analog meter installation car

Conrait installation car

The switch is lit. Lighting It lights. -

Light and turn it off by the automatic operation when spending in AUTO. (Refer to last page.)

Exclude the Conrait installation car.

The switch is lit. Lighting It lights.



When lamps are lit for a long time with the engine stopped, the battery completely charged with causes the battery rising.

Knowledge

About the operation condition

 
- When the engine switch is turned on, it is possible to use it. (When using it with AUTO.)-
It is possible to use it regardless of the position of the engine switch. (... lighting. Lighting When you use.)

About a convenient function

Forget light cancellation warning buzzer

The light switch lights. The buzzer that warns lamps to forget to be erased rings when the key is pulled out from the engine switch and the driver's seat door is opened.


● When you want to shine on forward far

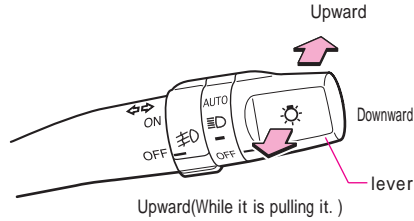

- Push the lever forward when the headlamp lights. -
- Even if the headlamp has been turned off, the headlamp becomes upward while being pulling the lever forward. -
- The headlamp upward display light in the meter lights when the headlamp is upward. (Refer to P.256.)



 ● Lighting and turning off * of reception desk fog lamp

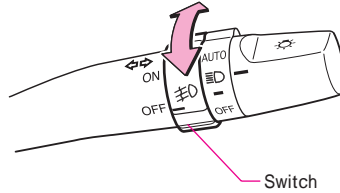

Light when you spend the switch in turning on, and turn it off when spending in turning off. -
The reception desk fog lamp display light in the meter lights when the
reception desk fog lamp lights. (Refer to P.257.)

Knowledge

 
About the reception desk fog lamp

Use it as assistance of the headlamp when view is bad because of rain and the fog, etc.

About the operation condition

The light switch lights. 滴・Lighting滴, AUTO, and the front position light or the headlamp is a point.
Light can be used.

How to use of the direction instruction lever.

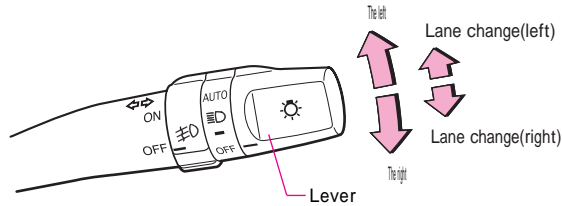

- The direction instruction display light that blinks under on when operating it a direction instruction light that is left or right, and exists in the meter also blinks the lever.

The lever returns automatically when the steering wheel is returned. Return it with the hand when it doesn't return. -

Each direction instruction light while it is suppressing it and the direction instruction display light blink to the under, and it turns it off when the hand is separated at the lane change.

Knowledge

About the operation condition

 
When the engine switch is turned on, it is possible to use it.

When blinking quickens abnormally

The lamp cutting of the direction instruction light is thought. Confirm whether the direction instruction light blinks.

The top and bottom of optical axis adjustment of headlamp

Halogen headlamp installation car

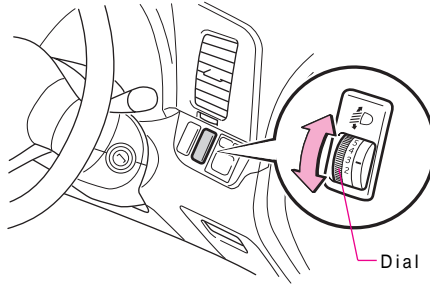

An optical axis of the headlamp (direction that light shines on) can be downward adjusted by spending the dial. -

Use it at the position of 0(0)(An optical axis is the most upward) usually.



Knowledge

About the top and bottom of optical axis adjustment

- Spend the dial when the front side of the vehicle face upes by putting luggage and the person, and the range that the headlamp shines on is different from always (It is more upward than usual) and make an optical axis of the headlamp downward. Return the dial to the position of 0(0) after selling luggage and the person wholesale. -

Adjust the following table according to the loading situation of the crew and the luggage room and adjust the dial position to the standard.

< standard at dial position >

Loading situation of crew and luggage room	Dial position
When only driver's seat gets on	0 0
When it gets on driver's seat and passenger's seat	1
At three person getting on of driver's seat, passenger's seat, and third seat	2
At 6 or 7 person getting on	3
When it gets on 6 or 7 people and luggage room is fully loaded	
When only driver's seat gets on and luggage room is fully loaded	4

- Go after adjusting the dial to the position of 0(0)(most upward position) when you adjust an optical axis by the car inspection etc.When

About the operation condition


the headlamp lights, it is possible to use it.



How to use of wiper & washer switch.

How to move wiper

- Reception desk

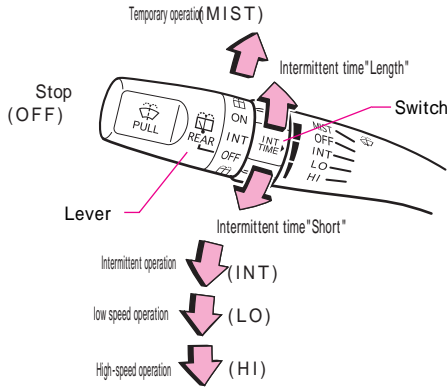


Operate as shown in the above figure when you operate the lever. -

Intermittent time can be adjusted by spending the switch when intermittent operates (INT) for about 3-12 seconds. -

As for operation (MIST), the wiper temporarily low-speed operates the lever from stop (OFF) while it is pushing it up. It returns to stop (OFF) when the hand is separated.

 - Riya

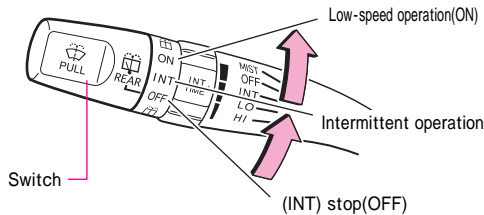

Operate as shown in the above figure when you spend the switch.



Confirm wiper rubber doesn't stick in the glass.

- Confirm wiper rubber doesn't stick in the glass when the window glass has frozen and when the wiper for a long time is not used. Wiper rubber might be damaged when operating while sticking in the glass. -
- Stop the car to the place of safety, turn off the wiper switch, make the engine switch ACC or LOCK, and remove the obstacle such as the snowfalls to operate the wiper when the wiper stops by the snowfall etc. on the way.



Knowledge

About the operation condition

When the engine switch is turned on, it is possible to use it.

 
About the protection function

The breaker is built into the wiper motor as a protection function. The breaker might operate when the situation with a large load of the motor continues, and the motor stop temporarily. It comes to be able to use it by the breaker's returning when doing for about ten minutes usually.




How to jet washer liquid

- Reception desk

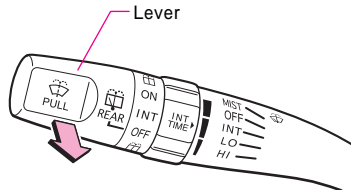

The washer liquid is jetted while the lever is being pulled forward. -
The wiper operates several times after jetting the washer liquid.

 - Riya

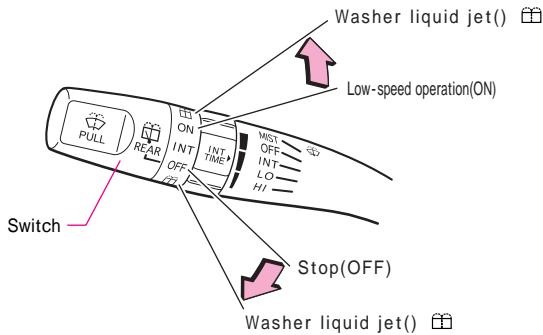

- When it is made to jet, the washer liquid is spent from low-speed operation (O N) of the switch in the side while low-speed operating ..on..
- When the switch is spent from stop (OFF) in the side below, the washer liquid is F. It shines.



Do not use the washer liquid at the cold. The low visibility might be caused.

- Do not use the washer liquid at the cold until the window glass gets warm. The washer liquid is the window glass and the frozen low visibility might be caused. -
- Operate the wiper after jetting the washer liquid. When the wiper is operated when the glass is dry, the glass might be damaged. -
- The pump might break down when it keeps operating the washer switch when the washer liquid doesn't come out. Check blocking the washer liquid measure and the nozzle. Moreover, consult the Toyota shop when the nozzle is blocked and the jet is bad.



Knowledge

About the operation condition

When the engine switch is turned on, it is possible to use it.

About the oil slick that attaches to the glass

 
The light etc. of the oncoming car reflect freely at wet night when there is an oil slick. Clean the surface of the glass with the glass cleaner.

About the replenishment of the washer liquid

Refer to P.441 for the replenishment of the washer liquid.



How to use of Riyauindudefoggar (cloudy remove) switch.

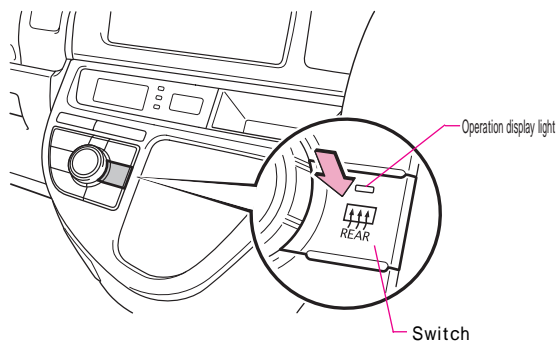

Operate for about 15 minutes when you push the switch, and stop when pushing again while operating. - The operation display light lights while operating.



注意

It causes the battery rising when continuously using it for a long time.



Knowledge

About Riyauindudefoggar

Warm the backing door glass in heat ray and take cloudy weather. -

The mirror heater installation car operates the mirror heater (Refer to P.216) simultaneously with Riyauindudefoggar.

About the operation condition

When the engine switch is turned on, it is possible to use it.