

Maintenance of car

The usual maintenance

The usual maintenance is necessary to keep the car to be beautiful indefinitely.

● About the carwash and the wax articles

Often read the explanation that has been described to each articles, and guard the usage and notes, etc.

● Wax must be disregarding once a month.

Go when shedding once a month or water worsens.



● About keeping and parking

We will encourage the place with an airy garage and the roof.

● About painting

- The stepping-stone wound and the scratch cause corrosion, and repair with the Toyota pure touch-up paint etc. ahead of time when finding it. -
Benzine..gasoline..organic..solvent..adhere..painting..damage..at
once..wipe off..wash a car.



 In the following cases, wash a car at once. 



It causes deterioration in painting and the corrosion of the body and parts, etc. to be brought forward. -

When you do running of the coast zone. -

When you run on the road where the antifreezing agent was scattered. -

When coal tar, sap, and bird's excrement and insects' corpses etc. adhere. -

When you run in the place where a lot of descents such as smoke, lamp soot, dust, iron filings, and chemicals exist. -

When remarkably becoming dirty with dust and mud, etc.

When you wash a car

Wipe water off after it washes off the grime while sprinkling water enough, it washes, and it drops. -

Do the circumference under the body and the underside and on in order below. -

Wash the body in the soft one such as the sponges and the chamois. -

Flush it enough by using the car shampoo in water when dirt is awful. -

Wipe water off so that the macula should not remain.

When you use the automatic carwash machine

- Store the mirror, and detach, and wash the antenna from the front side. -

Occasionally, the wound of the brush or more might attach, the luster of painting be lost, and deterioration be brought forward. -

It is likely to be caught of Riyaspoirar according to the carwash machine, is not able to wash a car, to be damaged, and to damage it.

When you use the high-pressure carwash machine

Do not bring the point of the nozzle close to the door glass etc. too much. Water might enter indoors because hydraulic pressure is high when bringing it close too much.

Maintenance of aluminum foil

- Contain the soapless soap in the sponge, and wash off dirt ahead of time. It is damaged easily, and use neither detergent that the grinding medicine enters nor a hard brush. -

It is likely must not to lose its gloss, and the hot water must not splash directly to the wheel by washing steam.

When wax disregards it

The body does when the temperature is cold (Give below about the temperature to me as a standard) after washing a car.



About the glass with Rancieringmirar and a water-repellent function

2.0L car

Defend notes of "Glass with a water-repellent function" of "Rancieringmirar" of P.377 and P.378 about maintenance.



警告

Do not sprinkle water in the engine room.

- Do not sprinkle water etc. on electric parts in the engine room. It is short-circuited of a failed start and electric parts of the engine, might lead to the breakdown and a vehicle fire, and is dangerous. -

Note that water doesn't splash directly to the brake when you wash a car at the cold.

Working of the brake worsens, and it might cause clinging of the brake, and it is not likely to be able to run by freezing when water enters in the brake device. -

Confirm the brake works normally lightly stepping on the brake pedal after washing a car.

When the brake pad is wet, it worsens working of the brake, and is taken the steering wheel effective only of one that has not been wet, might cause an unexpected accident, and is dangerous.



注意

Do not injure when you wash a car.

- Do not injure to the hand when you wash the circumference and the underside in the under. -

Use a hard neither brush nor scourer, etc. when you wash a car. Painting etc. are damaged. -

Be not do not wipe the surface of the lens of the lamp with organic solvents such as wax, benzene, and gasoline, worth, and do not rub with a hard brush etc. Might it damage, and deterioration be brought forward.

The indoor cleaning

Remove dust with the car cleaner and the vacuum cleaner, etc. , and wipe off lightly with the cloth to contain water or lukewarm water.



Do not sprinkle water in the car.

- Do not sprinkle water in the car when you clean the car. It causes the car breakdown, and when water splashes to electric parts etc. that the audio and floor carpet under includes, it might connect with a vehicle fire and is dangerous. -
- Do not use organic solvents such as benzine and gasoline to clean the seat belt. Moreover, do not bleach, and do not dye the belt. Important injury that decreases the performance of the seat belt, doesn't demonstrate an enough effect at the collision etc. , and is related to the life might be received and it is dangerous. Do not use the seat belt until drying by using the soapless soap or lukewarm water when you clean it.



Note the element included in the cleaner.

- Do not use an organic solvent, an acid such as the benzine gasoline or an alkaline solvent when you maintain the interior. Discoloration and doing cause seeing. Moreover, these elements might be included in various cleaners, and use it after it often confirms it. -
- Note no allowance of the interior goods (air conditioner and audio, etc.) aromatic substance's (liquid, solid, gel, and plate type, etc.) direct touch, and spilling. It might cause discoloration and seeing and the painting peeling off of doing according to the included element. -
- Do not use the glass cleaner etc. when you clean the inside of the backing door glass. Heat ray is disconnected, and it is likely not to operate. Wipe the cleaning lightly with the cloth to contain water or lukewarm water along heat ray. -
- Do not use the glass cleaner that the compound enters when you clean the inside of the glass. Wipe the cleaning lightly with the cloth to contain water or lukewarm water.

Maintenance of air conditioner

● Check of air conditioner gas (refrigerative)



The air-conditioning performance decreases when the refrigerative is insufficient.
Check and replenish it before summer comes.


● Exchange of clean air filters

1 Make the engine switch LOCK.

2 Remove the glove box.


Remove the pin of Damparsta after opening the glove box, pushing the side internally, and removing upper Tsmc by one, lower gradually while pulling the glove box forward lightly, and detach it. - Refer to page 408 when you do not remove the pin of Damparsta easily.

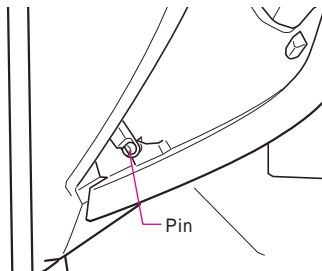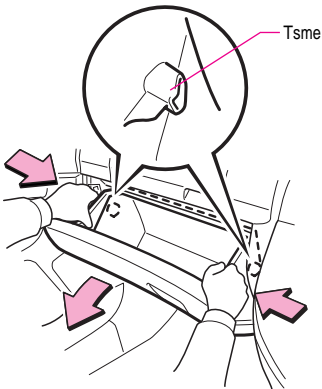

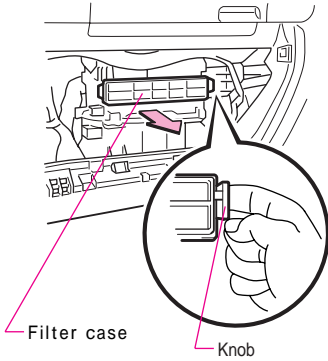


- 3** Remove the filter case.
 Pull a certain knob forward right and left, and detach the filter case with the filter case.

 2.0L car
 (pollen removal type > < with deodorization function)

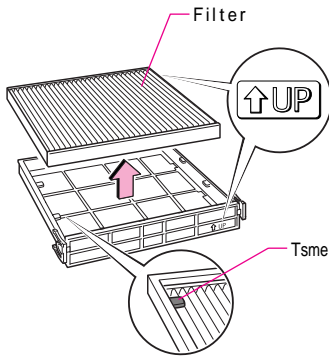


- 4** It changes a filter.
 Detach the filter from the detached filter case, and exchange it for a new filter. -
 Install the filter in Tsme of the filter case surely. -
 F i l , 蚶UP" Make the arrow of the mark become to the above and install it.

 1.8L car
 (pollen removal type)

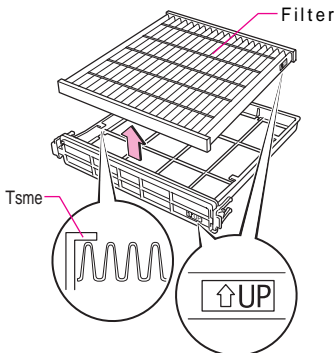

- 5 Install the filter case.
Filter case. Install it surely so that the arrow of the mark of "UP" may become the above.

 - 6 Install the glove box.
Upper Tsme is fixed by one pushing the glove box side internally after the pin is installed in Damparsta of the set of the cutting lack of Tsme under the glove box to respect of the shaft and setting, and the glove box is closed.

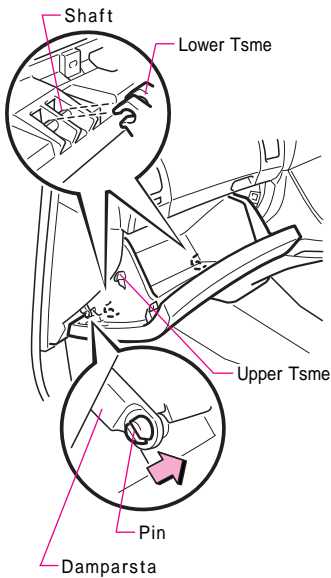

Contents



Warning

Basic
services, operationDriving
Handling
deviceThe
Handling indoor
equipmentGood. Safety
of
To
theory, practice
and
equipmentHow
to
attentionAssociate, driving,
car

Maintenance

Myriad
One(D)C
with

Index



Exchange filters after making the engine switch LOCK.

- Exchange filters after making the engine switch LOCK. -

It thinks about the amount of the wind of the air conditioner, and remarkably the glass decreases or was cloudy weather, becoming that becomes empty, and stopped up of the filter is thought. Clean (Only 1.8L car :) or exchange filters.

Consult the Toyota shop about the cleaning of the filter. -

Filters of 2.0L car are exchanged types. Do not clean it by the unpleasantness of washing in clear water air blow. -

Install the filter so as not to mistake the table for the back of the filter. -

Use the air conditioner with the filter installed. When the air conditioner is used without installing the filter, it might cause the breakdown.



About the cleaning and the exchange of air filters

- The air filter is installed in the air conditioner. We will encourage a regular cleaning (Only 1.8L car :) and the exchange to use it comfortably. -

Air filters can be exchanged without the tool. -

Consult the Toyota shop about the air filter of the air filter for the cleaning and the exchange.

Standard of cleaning(Only 1.8L car :). Each 15,000km. 7,500km. .

Standard 2.0L

 
car of exchange. Each 15,000km. 10,000km. .

1.8L car . Each 30,000km. 15,000km. .

. . : for the multi district (district where a lot of traffic and dust such as large cities and the cold districts exist).

When you do not remove the pin of Damparsta easily

The right side of the glove box is pulled forward at the end after the entire glove box is previously removed, and detaches the pin when the pin of Damparsta is not removed easily.

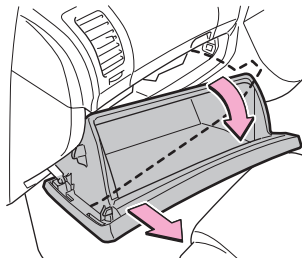


Check of tire

Tire rotation (tire position exchange)


Tire wear-out both even do long vit
y..extend..tire..rotate.-

Exchange one wheel with a spare tire when you exchange the
tire positions with an installed jack.

 17-inch wheel installation car

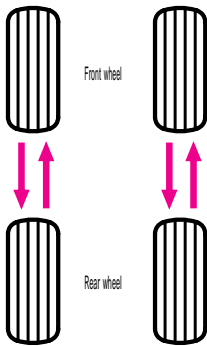

15-inch wheel installation car

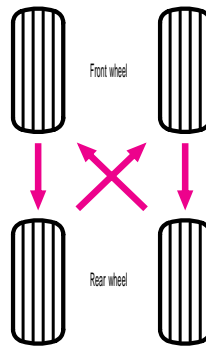 

Check the tire as a daily check.

 
- Check the tire as a daily check. (Refer to P.75 "Attention of the
tire".)-

Consult the Toyota shop when you exchange the tire disc wheel wheel
installation nuts. (Refer to P.89 "Other attention".)



● About the rotation direction instruction mark


17-inch wheel installation car

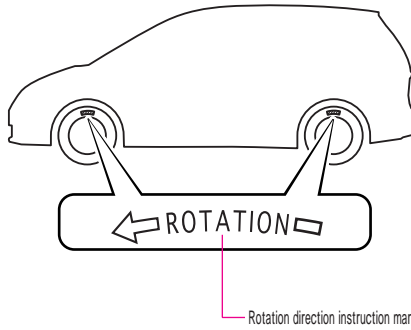


The direction of the rotation on the performance of the tire is specified. Install it so that the rotation direction instruction on tire side mark may turn forward of the vehicle.

Battery exchange * of remote control of wireless door lock

 
Exclude the smart door lock installation car.

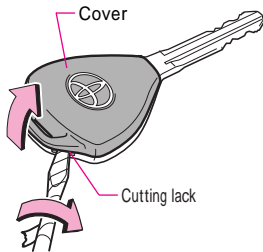

 
- 1 Detach the cover.
Detach the cutting lack part in a precise driver etc. on the market and detach and the cover. -
A thin tape is wrapped around driver's point for the damaged prevention of the cover.

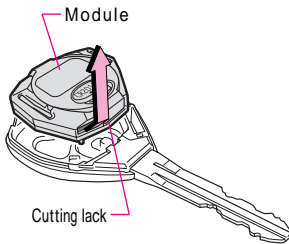

 - 2 Take out the module of the main body.
Take out the module of the main body putting the fingernail etc. on the cutting lack.

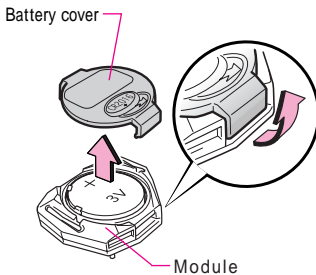

 - 3 Remove the battery cover of the module.
Detach the battery cover of the module.

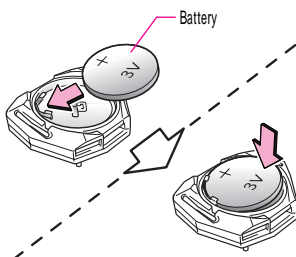

- 4 It changes a battery.
An old battery is taken out, and do up ⊕ and insert the new battery side.

Contents



Warning

Basic
causes, operationDriving
Handling
deviceThe
Handling indoor
equipmentgood. Safety
of
To
theory, details
and
equipmentHow
to
attention
associate, aiming,
car

Maintenance

Myriad
One(D)
七
nine

Index

5 Fix the battery cover of the module.
Set the battery cover firmly as it is original.

6 Obtain the module and the cover.
The module is returned to the main body, and it attaches a cover.

7 Do the operation confirmation.
Confirm LED of the main body lights when either of the remote control switch is pushed.



警告

Note that detached neither battery nor parts (Especially, the child :) are swallowed. Important injury might be received when swallowing and it is dangerous.



注意

Note the handling of the battery and detached parts.

- Do not lose detached parts etc. when you exchange the batteries. -

Note. of do not bend the battery cover and exist-

With the ⊕ battery pole ⊖ Make to the correct direction without fail and install the pole. -

Note that the electrode in the battery insertion part is not bent, and garbage and oil, etc. adhere in the module.



Knowledge

 
About the battery

Use battery . . . lithium battery CR2016

 
Buy the battery in the Toyota shop, the clock shop, and the camera shop, etc.

Battery exchanges of smart keys of smart door lock


Smart door lock installation car

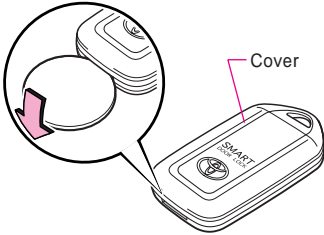

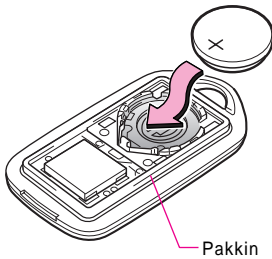

 - 1 Remove the cover.
Remove the cutting lack part with the coin etc. and remove and the cover.

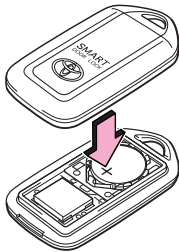

- 2 It changes a battery.
An old battery is taken out, and do up ⊕ and install the new battery side.



- 3 Fix the cover.
Obtain the cover firmly as it is original.

- 4 Do the operation confirmation.
 ·  Main body when switch is pushed
Confirm drinking LED lights.

Contents



Warning

Basic
causes, operationDriving
Handling
deviceThe
Handling indoor
equipmentGood. Safety
of
To
theory (vehicle
and
equipmentHow
to
attention
associate driving
car

Maintenance

Myriad
OneIDと
with

Index



Note that detached neither battery nor parts (Especially, the child :) are swallowed. Important injury might be received when swallowing and it is dangerous.



Note the handling of the battery.

- Note that neither Pakkin nor detached parts, etc. are lost when the batteries are exchanged. -
- With the \oplus battery pole \ominus Make to the correct direction without fail and install the pole. -
- Note that the electrode in the battery insertion part is not bent, and garbage and oil, etc. adhere. -
- Do not damage, and do not twist and do not install Pakkin. -
- The cover might be damaged, and remove after appropriating the cloth cutting to the coin etc. when you detach the cover by using the coin etc.



About the battery

Use battery . . . lithium battery CR2032

Buy the battery in the Toyota shop, the clock shop, and the camera shop, etc.