


Check and exchange of fuses

The ball cutting of blowing the fuse and the lamp is thought when the lamp doesn't go on and when the device of the electrical system doesn't work.

Check the fuse and exchange it according to the following procedure. -
Consult the Toyota shop about the fuse.


1 Make the engine switch LOCK.

2 Open the fuse box. -

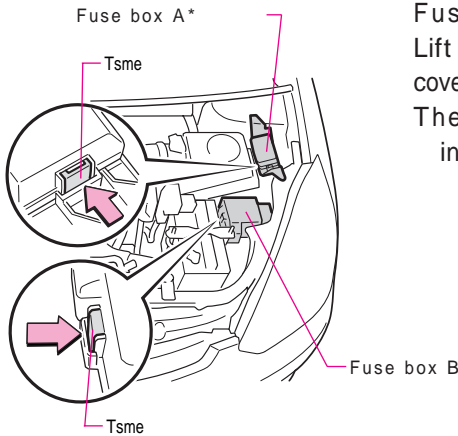

Fuse box in engine room
Lift the cover while pushing Tsme on the cover side, and remove the cover. -
The fuse label is displayed in the cover.

- 4WD car, Conrait installation car, and Dischargeheddoramp installation car

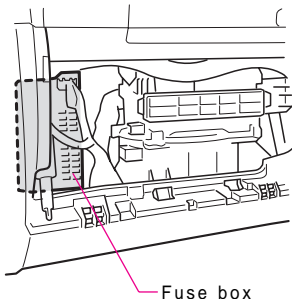

- Passenger's seat side fuse box
It is necessary to detach the glove box before it checks and it exchanges it. Refer to P.405 "Exchange of clean air filters" for detaching the glove box. -

The fuse label is on the back of the glove box.

3 Check the fuse.

Confirm the fuse that should be checked from the situation of the breakdown with the fuse label, pull out the fuse, and check whether the fuse cuts. -

The fuse has the one that is depending on the specification of the car either. -

Consult the Toyota shop about the fuse.

4 Exchange fuses.

Exchange it for the fuse of regulated capacity according to the display of the fuse box when the fuse cuts. -


When lamps do not light, the lamp cutting is thought. -

In the following cases, receive the check in the Toyota shop.


⚠ When the fuse cuts again even if it changes it.

⚠ When the device of the electrical system doesn't work even if it changes it.

It cut.

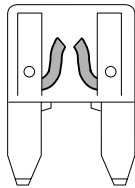

It doesn't cut.

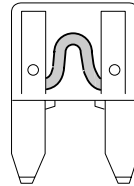


Do not use fuses other than regulated capacity. It overheats, damages wiring by a fire, might connect with a fire, and is dangerous.




☉ Device of which fuse takes charge

- Fuse box A in engine room

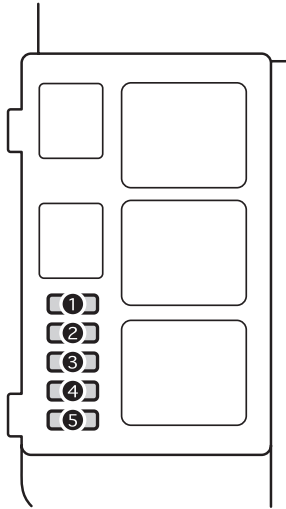

Fuse name	Amperage	Device name of which fuse takes charge
H-LP LH(UPR)	15A	Headlamp (left) high beam
H-LP RH(UPR)	15A	headlamp (right) high
Zal H-LP LH(LWR)	15A	beam headlamp (left) low
H-LP RH(LWR)	15A	beam headlamp (right) low
SLC	10A	beam 4WD system

- Fuse box B in engine room

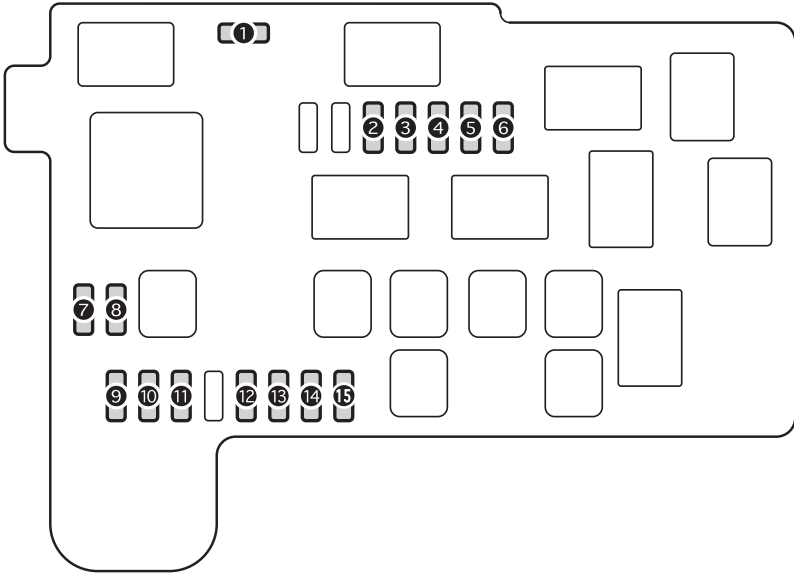

	Fuse name	Amperage	Device name of which fuse takes charge
Symbol label	ST	7.5A	StarterHeadlamp
箆	H-LP RH	15A	(r i g h t)
箆	H-LP LH	15A	headlamp (left)
箆	ECU-B	7.5A	engine computer indoor
箆	DOME	10A	light
箆	RAD NO.1	15A	Audio
箆	ABS NO.2	25A	ABS computer
箆	AC INV	15A	accessories socket
箆	ETCS	10A	Electronically controlled throttle
Basket	EFI2	15A	
筐	EFI	20A	EFI computer horn direction
Pollution	HORN	10A	instruction
Symbol status	TURN. HAZ	10A	light and emergency blinking
箆	DCC	30A	_____
箆	AM2	30A	light engine switch

Contents



Warning


Basic
causes, operationDriving
Handling
deviceThe
Handling indoor
equipmentGood. Safety
of
To
theory, vehicle
and
equipmentHow
to
attentionassociate, driving,
car

Maintenance

Myriad
One(D)七
五

Index

- Passenger's seat side fuse box

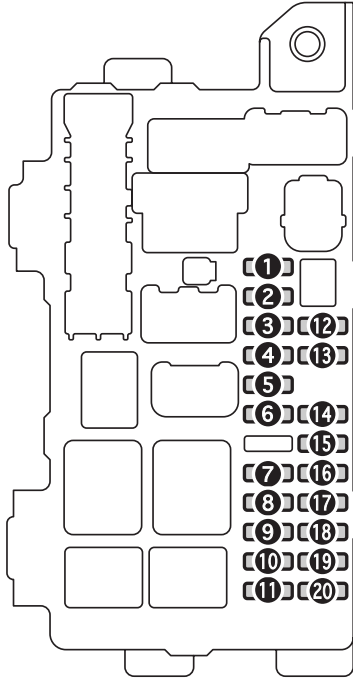

	Fuse name	Amperage	Device name of which fuse takes charge
Bomb label	IGN	15A	
笆	LIFT UP	30A	_____
筋	RR FOG	7.5A	Ignisshonriyafogra
笛	FR FOG	15A	mpfrontofogrampengensitti
笙	AM1	25A	
笛	PANEL	7.5A	Switch lighting and air
范	RR WIPER	15A	conditioner lighting
笨	ACC	15A	Riyawaiparacsesaesokettoeacon
笑	A/C	10A	
Basket	MIR HTR	10A	Mirror heaterDoor
筐	ECU ACC	7.5A	mirror and audio
Pollution	TAIL	10A	taillight
Bomb stick	FR DEF	15A	E l e c t r i c
笋	FR P/W	30A	d o o r
笙	DOOR	25A	l o c k
笳	WIPER	20A	Wiper & washer
Straw mat	ECU-IG	7.5A	A B S
管	RR DEF	25A	Computarriyuindudefoggarmatar
笳	GAUGE	7.5A	braking
	STOP	15A	light

Contents



Warning

Basic
causes, operationDriving
Handling
deviceThe
Handling indoor
equipmentGood. Safety
of
To
theory, vehicle
and
equipmentHow
to
attention
associate, driving,
car

Maintenance

Myriad
One(D)七
冊

Index