

8

At the emergency

Tool, spare tire, and 458 ..Tahonootsts	
Storage place 458 of jack, tool, and spare tire	458
How to take out tool and jack	459
How to detach spare tire	461
How to use of Tahonootsts.	466
When breaking down,	468.
When breaking down on the road	468
When it was not possible to move	469
When blowing out,	470.
Exchange of tires	470
When the battery goes up,	480.
What is the battery rising?	480
When overheating,	484.
What is overheating?	484
Pulling is	488.
Method of pulling	488
When the accident happens,	492.
Do the following treatment without panicking.	492

- Contents
- Warning
- Basic car's operation
- Driving Handling device
- The Handling indoor equipment
- Good Safety of To theory, practice and equipment
- How to attention driving car
- Notice
- Myriad OneD
- Index