


Tool, spare tire, and Tahonootsts

Storage place of jack, tool, and spare tire

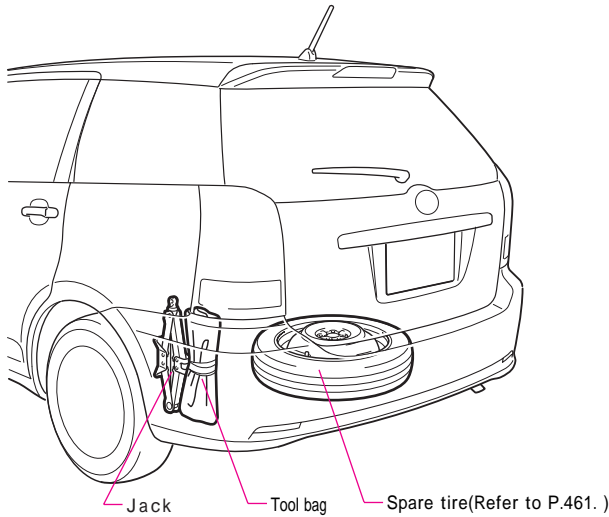


- The jack and the tool bag are stored in the cover on the luggage room passenger's seat side.


蘆The tool bag is as follows.



Wheel nut wrench

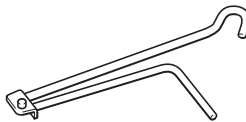

Jack steering wheel

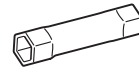


Extension(Refer to P.461.)


- The spare tire is stored under the luggage room. I

will confirm no embarrassment at the emergency the usage etc. of the kind and Tahonootsts of the jack and the tool beforehand.

How to take out tool and jack

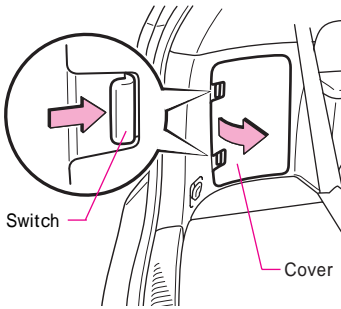

- 1 Remove the cover.
Pull the cover forward while pushing the switch and remove.

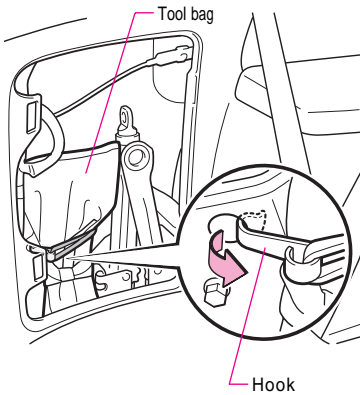

- 2 Take out the tool bag.
Remove the hook, and take out the tool bag.

Contents



Warning

Basic
controls, operation

Driving
Handling
device

The
Handling/indoor
equipment


Good. Safety
of
To
theory/controls
and
equipment

How
to
attention
associated driving,
car

Maintenance

Myriad
One/D
C
MTC

Index

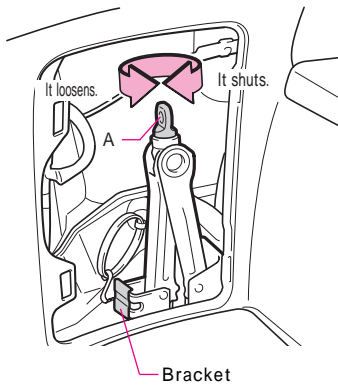

- 3** Take out the jack.
Spend, loosen the part of A of the jack, and take out the jack.
Tighten the part of A so that the jack may fix to the bracket when you store it.



警告

Store it surely after using the tool and the jack.

- Store it in the decided place surely after using the tool and the jack. It might cause an unexpected accident when indoors leaving it and is dangerous. -

The jack installed by the car is only for customer's car. Do not use for other cars, and do not use the jack of other cars for customer's car. It might cause an unexpected accident when the handling of the jack is mistaken and is dangerous.




注意

Do not use the jack installed by the car excluding the tire exchange and the tire chain detaching.

How to detach spare tire

When detaching it

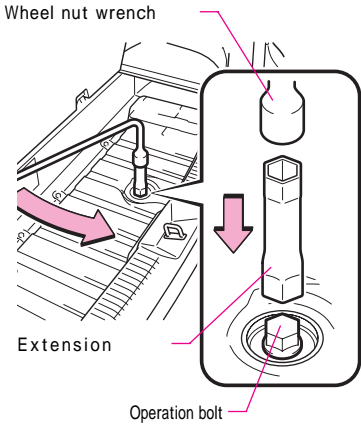


1 The deck board installation car detaches the central deck board. Refer to P.340.

2 Sell the spare tire wholesale. Loosen the operation bolt according to the following procedures, and sell the spare tire wholesale.

灑 Turn over the mat of the luggage room.

灑 Install the extension in the operation bolt.

灑 Loosen the operation bolt until the wheel nut wrench is installed in the extension, and the loincloth and the spare tire arrive at ground left.

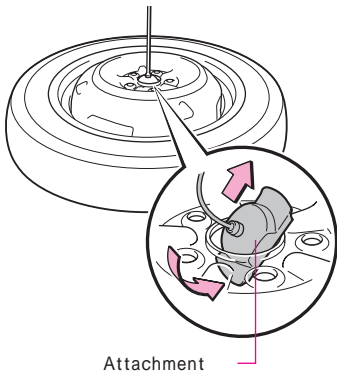

3 Detach the spare tire. Remove the attachment from the wheel hole, and detach the spare tire.



● When you store it

- 1** Install the attachment in the wheel hole.
Have the design side of the tire up and install the attachment.
(Refer to last page.)
- 2** Store the tire.
Last page procedure 2 Drink and roll up the wheel nut wrench according to points and roll up the loincloth and the wire right. -
Confirm whether the attachment shifts from the wheel hole when the tire leaves ground.
- 3** Confirm the tire is surely fixed.
Tighten the operation bolt fully after it rolls it up enough. -
Tightening torque: About 40N. m{400kgf·cm}



Do not run for a long time with the removed standard tire stored in the spare tire storage tool. It might cause an unexpected accident and is dangerous.



Confirm the tire is surely fixed.

- Confirm the tire is surely fixed after storing the spare tire.
The tire shakes if not fixed, and it is likely to shift while running. -
- Tighten the operation bolt until lifting up to the vicinity where the tire touches the body, and sticking to the body while supporting the tire by the hand when you store the removed standard tire in the spare tire storage tool. Moreover, confirm fixation surely by shaking the tire after it stores it. The tire shakes if not fixed, and it is likely to shift while running. -
- Do not use the impact wrench when you detach the spare tire. When the impact wrench is used, the storage tool might be damaged. -
- Do not install tires other than specification in the attachment. It is not fixed when tires other than specification are installed, the tire shakes, and the tire might come off while running. -
- Roll up the attachment until sticking to the body even when you do not store the tire in the storage tool after taking out the spare tire. It hits the body in case of the state that hangs by the attachment and fell, and the body might be damaged. -
- Do not check the spare tire, and do not install the spare tire in which abnormality is found. Adjust the specified air pressure after confirming correct air pressure with the table or P.453 of "Tire inflation pressure" pasted to the body side where the driver's seat door was opened. -
- Detach the spare tire before the jack improves.



Knowledge

About the extension

The extension is the one using it only for the operation bolt. Do not use it for other parts.

About the prevention of tightening too much mechanism of the operation bolt

The structure that hears the sound "Catitsu" when the operation bolt is tightened by the power of tightening torque about 40N. m(400kgf. cm) or more when the tire is stored, and doesn't shut any more. This is the one by working of the prevention of tightening too much mechanism of the operation bolt, and it is not abnormal.



● About the temporal spare tire

The temporal spare tire is a tire temporarily used when a standard tire blows out. Exchange it for a standard tire as soon as possible.



Check the air pressure of the temporal spare tire.

- Check the air pressure of the temporal spare tire. It might cause an unexpected accident because the difference of the diameter of the tire grows further if running in the state where the air pressure is insufficient and is dangerous.

Air pressure (gage pressure) when tire is cold: 4.2kg ..420kPa (../ 袞) -

The temporal spare tire installed by the car is only for customer's car. Do not combine with other tires and the disc wheels, do not use for other cars, and use the temporal spare tire of other cars for customer's car. It goes out to running the adverse effect, might cause an unexpected accident, and is dangerous.



The temporal spare tire is the one temporarily using it when a standard tire blows out. Diameters are smaller than standard tires, and note the following matter.

- Do not run about 100 km/h or more when you install the temporal spare tire. It might cause an unexpected accident. The temporal spare tire is a tire temporarily used when having tire punctured. Exchange the temporal spare tire for a standard tire as soon as possible. -
- Do not drive in time when a standard tire is installed and the same sense when the temporal spare tire is installed and an umbo etc. are got over. Height changes when the temporal spare tire is installed into the standard tire installation. The car might be thrown when driving in the same sense. -
- Do not install the tire chain in the temporal spare tire. The tire chain might hit the body side, and the adverse effect be caused for running. Install the tire chain after without using the temporal spare tire for the front wheel, using for the rear wheel, and applying the removed rear wheel to the front wheel when the front wheel blows out on the snow road and the frozen road. -

When the temporal spare tire is installed, an accurate speed of the vehicle might not be able to be detected, and the following system might not operate normally.

蘆ABS

蘆Brake assistance(2.0L car <Z grade > and 4WD car)

蘆TRC

蘆VSC

蘆Backing guide monitor

蘆Window shade corner monitor

蘆GPS voice navigation system

Moreover, the following system might not be able not only to demonstrate the performance enough but also negatively affected by the drive and the system parts.

蘆Active torque control 4WD

Contents



Warning

Basic
controls, operationDriving
Handling
deviceThe
Handling/indoor
equipmentGood. Safety
of
To
theory/vehicle
and
equipmentHow
to
attention
associate driving
car


Maintenance

Myriad
One(D)七
ね

Index


How to use of Tahonootsts.

Storage place

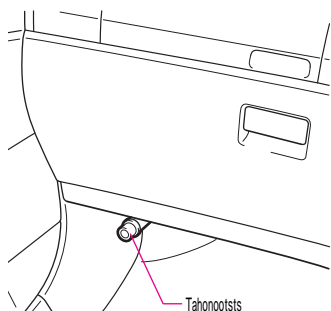


It is applied in preparation for one's passenger's seat feet.

How to use of Tahonootsts.

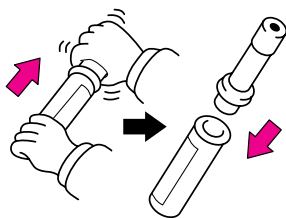

1 Assemble Tahonootsts.

Take out while twisting the main body, reverse, and insert it.

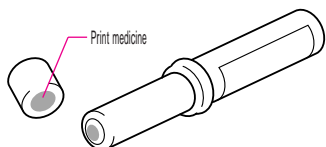

2 Ignite.

Ignite when rubbing with the print medicine of the head of the cap.



Handle Tahonootsts correctly.

- Do not let the child touch Tahonootsts. It ignites by the mischief etc. , might cause an unexpected accident, and is dangerous. -

Do not turn to the face and the body, and do not bring it close while using Tahonootsts. Important injury such as the burns might be received and it is dangerous. -

Do not use Tahonootsts near the combustibles such as the fuels. It might ignite and is dangerous.



Do not use Tahonootsts in the tunnel etc. View is deteriorated with smoke, and use the emergency blinking light in the tunnel etc.



Knowledge

About Tahonootsts


- Use the emergency blinking light together because the Tahonoo time is about five minutes. -

There is validity term in Tahonootsts. Buy it in the Toyota shop before the validity term displayed in the main body cuts.




When breaking down

When breaking down on the road

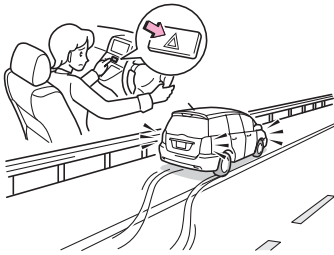


Pull over the car to the shoulder while blinking the emergency blinking light (Refer to "How to use of the emergency blinking light switch" for P.292) and stop.

Use the emergency blinking light to inform another car when the road is unavoidably parked due to the breakdown etc.

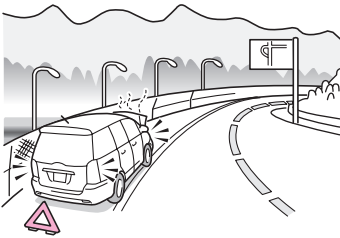


In the road only for the expressway and the car, put the triangle reflector or the stop display light behind the vehicle. (It is legally obligated.)

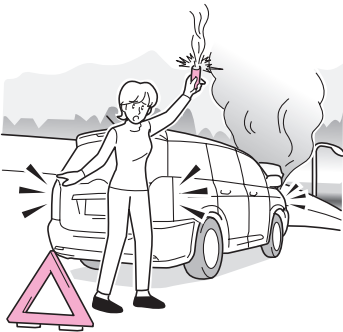

..emergency.. ..requiring.. is signaled with Tahonootsts.
P.466 "How to use of Tahonootsts" Reference.

When it was not possible to

When it was not possible to move in the railroad crossing

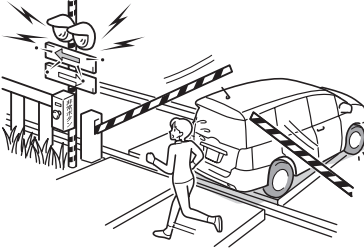

The gear-shift 系統 (System) is in the person in and the vicinity. Have pushing to the place it is.

Push the panic button of the railroad crossing at once when it was not possible to move in the escape circle etc. Use

Tahonootsts when you require the emergency. -

The car cannot be moved in the emergency evacuation by maintaining the engine switch with START.

When it was not possible to move on the road



The gear-shift 系統 (System) is in the person in and the vicinity. Have pushing to the place it is. -

The car cannot be moved in the emergency evacuation by maintaining the engine switch with START.

- Contact the Toyota shop when embarrassing it.

Read service net/customer consultation telephone net of "Maintenance note".

