



## Lock and unlocking of door


With the key

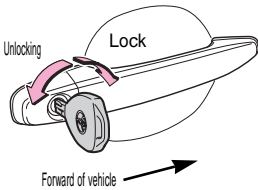


With the remote control switch

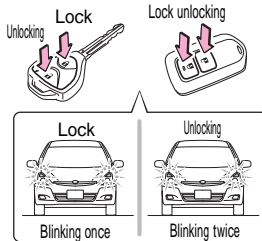


In a smart door lock  
(smart door lock installation car)

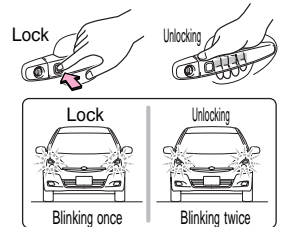


A detailed introduction concerning the opening and shutting of each part

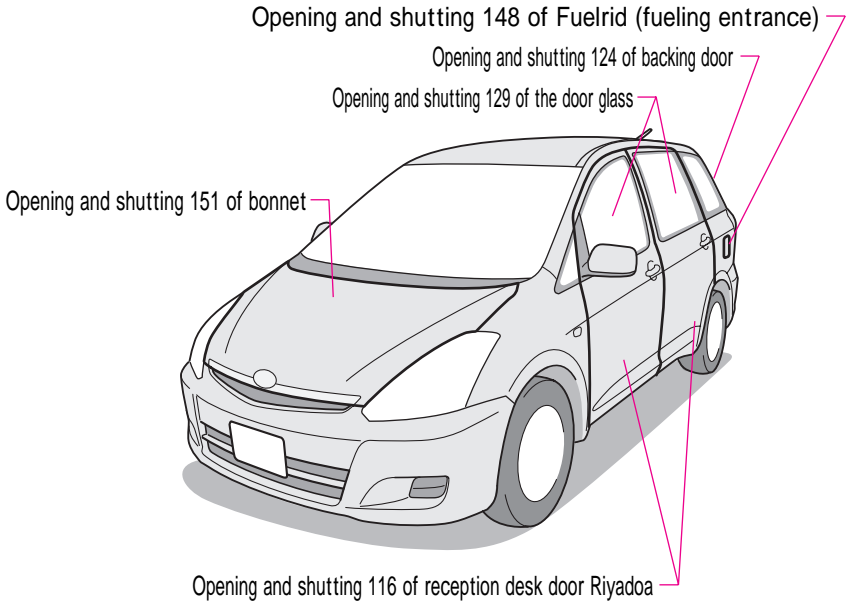


### Opening and shutting of the door glass

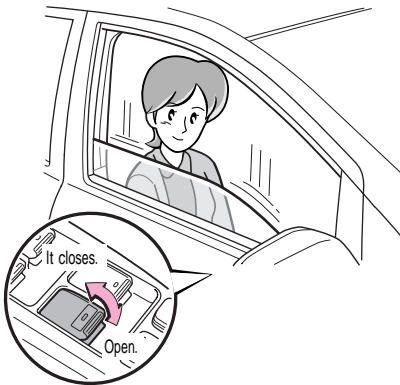

### Fuelrid (fueling entrance)How of Hira to disregard it drinking

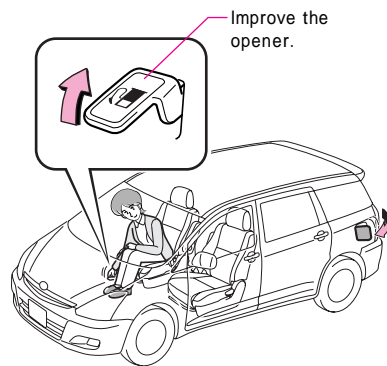

- Contents
- Warning
- Basic system operation
- Driving Handling device
- The Handling indoor equipment
- Good Safety of To theory animals and equipment
- How to attention associate aiming car
- Maintenance
- Myriad One(D)
- Index

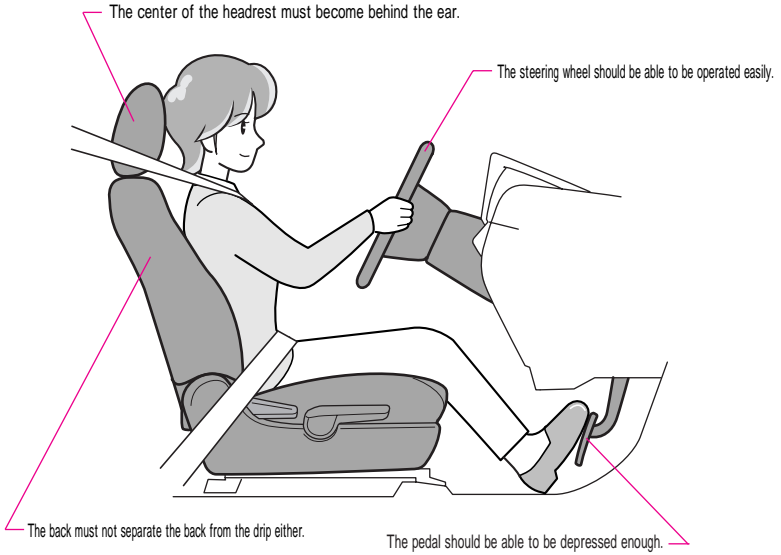

It is positional before and behind the regulating function of


the driver's seat (the 1).




The back is an angle of the drip.



Raising and lowering of the entire seat

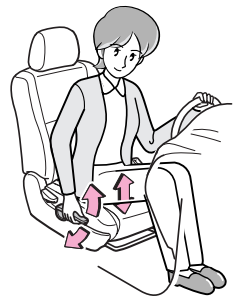


A detailed introduction concerning the seat

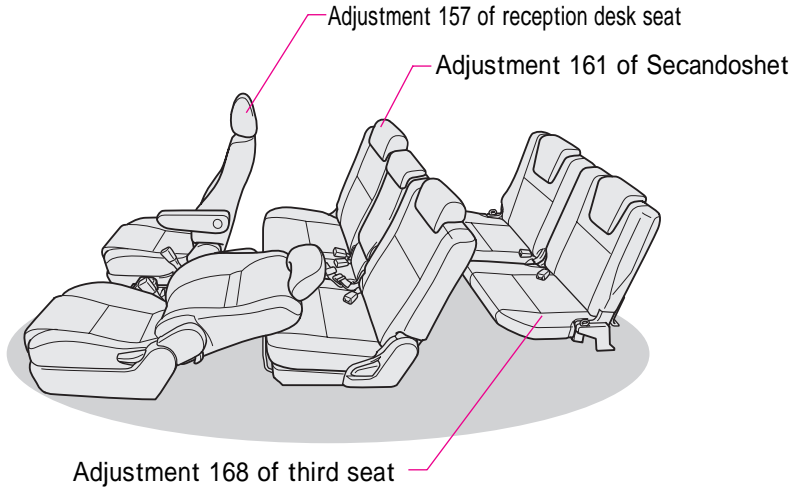


- Refer to P.170 for the seat arrangement.

Regulating function (the 2) headrest

of driver's seat

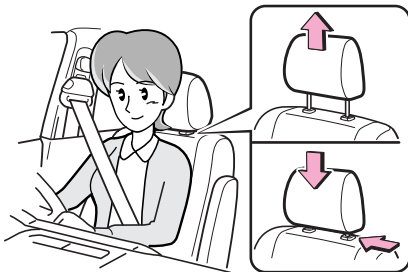

- Contents
- Warning
- Basic settings, operation
- Driving Handling device
- The Handling indoor equipment
- Good Safety of To theory/controls and equipment
- How to attention associate driving car
- Maintenance
- Myriad One(D)
- Index

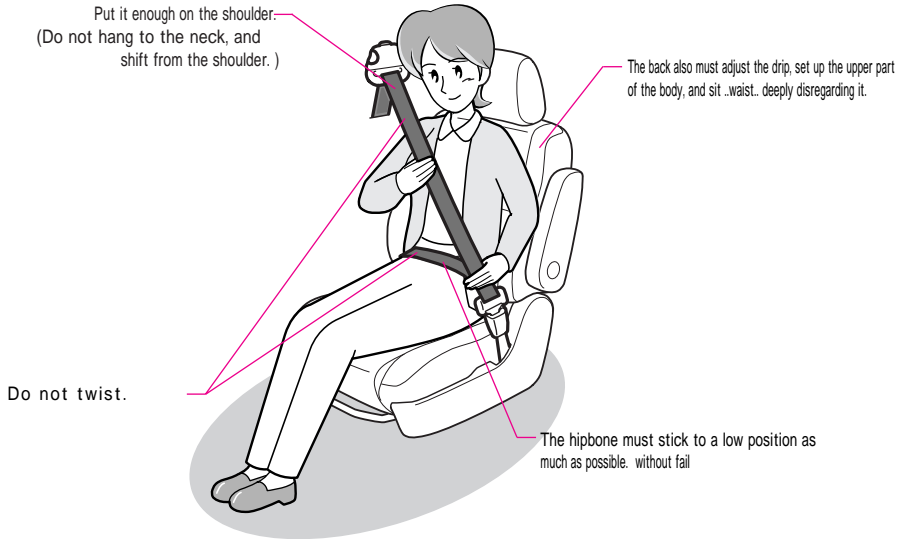

## Method of wearing

1 Draw out the belt.




2 Insert the plate in the buckle.



- Insert it until the sound "Catitsu" is heard.


A detailed introduction concerning the seat belt

Wearing 196 of seat belt

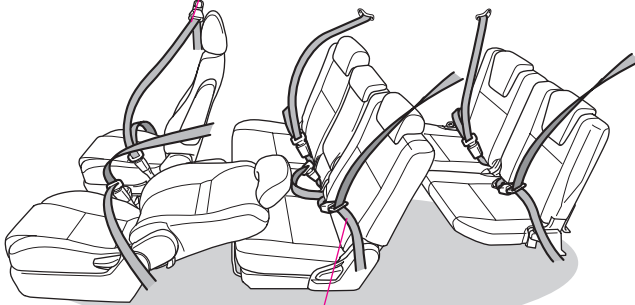


..fixation.. 204 of child seats

Height adjustment

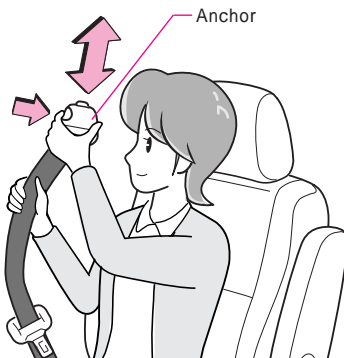


Adjust the height of the belt with the anchor.

How to remove

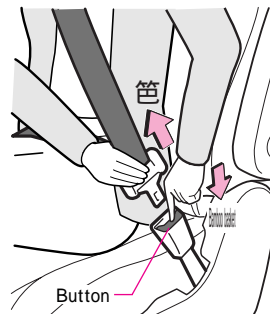



Push the button of the buckle. It is necessary to wind up up the belt.

- Contents
- Warning
- Basic safety operation
- Driving Handling device
- The Handling indoor equipment
- Good Safety of To theory vehicle and equipment
- How to attention associate driving car
- Warning
- Myriad OneID
- Index

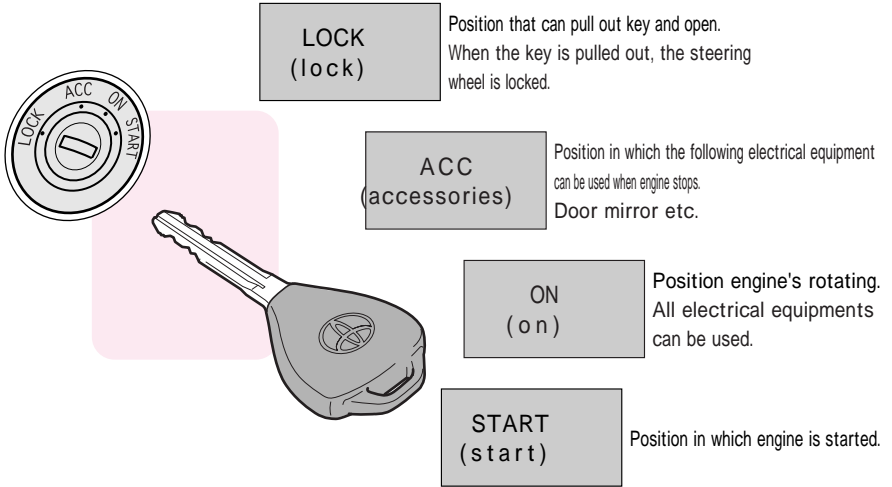

### How for engine to start


- 1 Depress the brake pedal firmly.
- 2 Confirm the position of the gear-shift.
- 3 Spend the key in START.

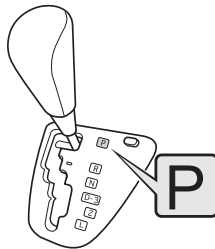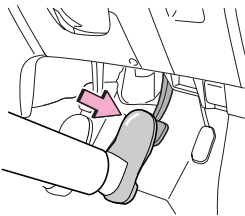

- Confirm the parking brake hangs.


### How to pull out key

The gear-shift 線Line now Do.

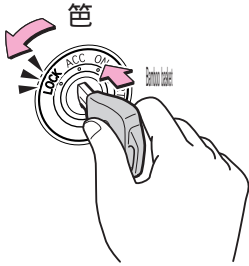

Do not touch Push the key from ACC.  
Do Pull out the loincloth to LOCK.


### Release of steering lock

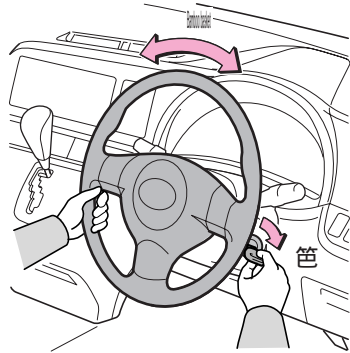

Do not touch While moving the steering wheel  
Do Spend the key.


### How to move gear-shift(When starting. )

1 Depress the brake pedal firmly.

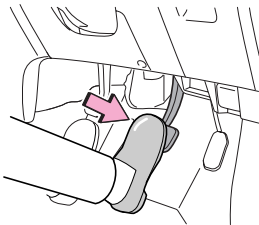


- Confirm the parking brake hangs.

2 The gear-shift 線 .twining. operation Do.

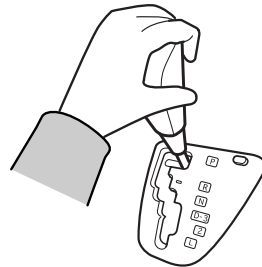

- Contents
- Warning
- Basic system, operation
- Driving Handling device
- The Handling indoor equipment
- Good. Safety of To theory, practice and equipment
- How to attention associate driving car
- Maintenance
- Myriad One(D
- Index

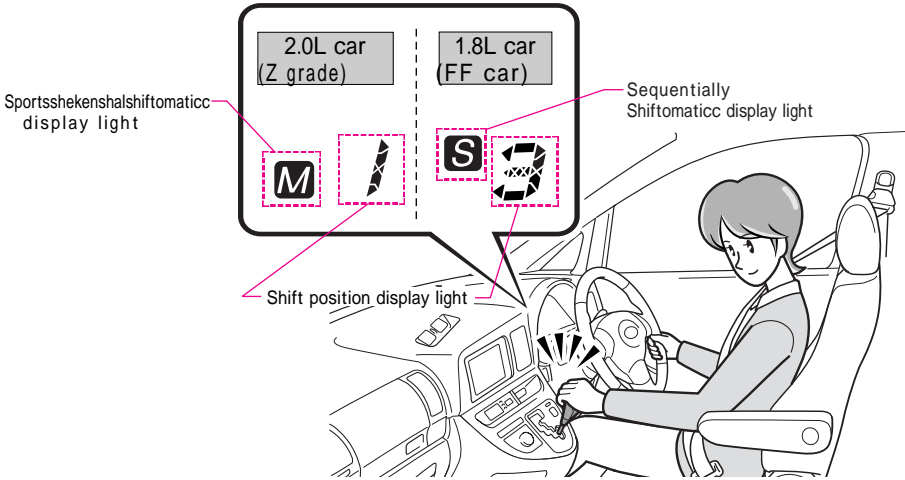

## How to use the sequential shift mode.

### 1 2.0L car (Z grade)

The gear-shift 縷. -  
The Sports Shekenshal Shiftomatic display light lights.

### 1.8L car (FF car)

The gear-shift 絲. -  
The Shekenshal Shiftomatic display light lights.


### 2 Move the gear-shift when you do the shift improvement and move the gear-shift to the side when + side and the down of the shift is done. -

#### 2.0L car (Z grade)

The changing the speed steps that have been selected between 1-7 are displayed in the shift position display light. -


#### 1.8L car (FF car)

The changing the speed steps that have been selected between 1-4 are displayed in the shift position display light.

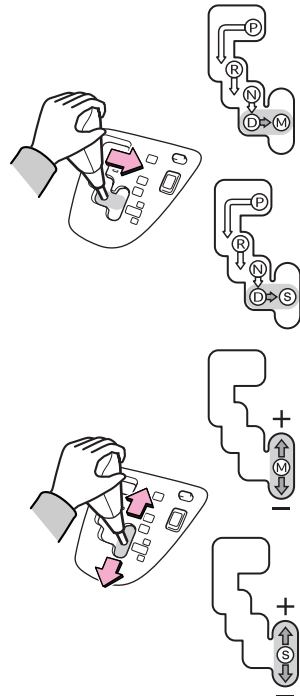

A detailed introduction concerning the driving device

Gear-shift-  
Super ECT installation car 222-  
Super CVT i installation car 230

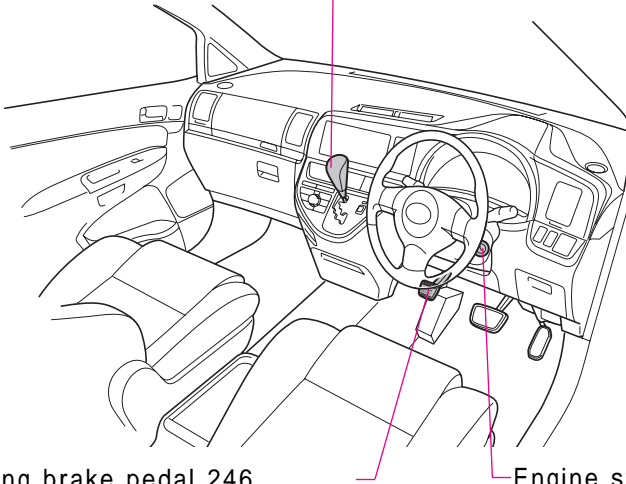


Parking brake pedal 246


Engine switch 218

How to use of the parking brake.

Method of release

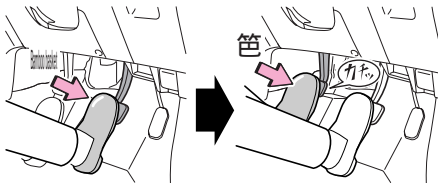

How to put it

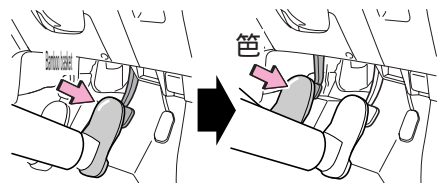


**Bottom label:** While firmly stepping on the brake pedal by the right leg

**笛** Depress the parking brake pedal with the left leg until "Catitsu" and the sound are heard, and separate slowly.





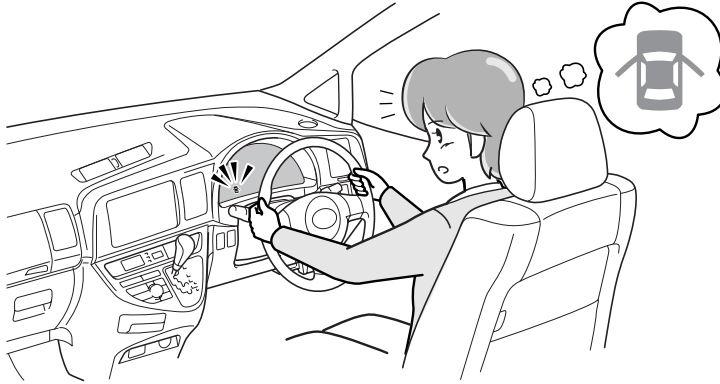

**Bottom label:** While firmly stepping on the brake pedal by the right leg

**笛** Depress the parking brake pedal with the left leg fully.


- Contents
- Warning
- Basic settings, operation
- Driving Handling device
- The Handling indoor equipment
- Good Safety of To theory (vehicle and equipment)
- How to attention associate driving car
- Notice
- Myriad One(D)
- Index







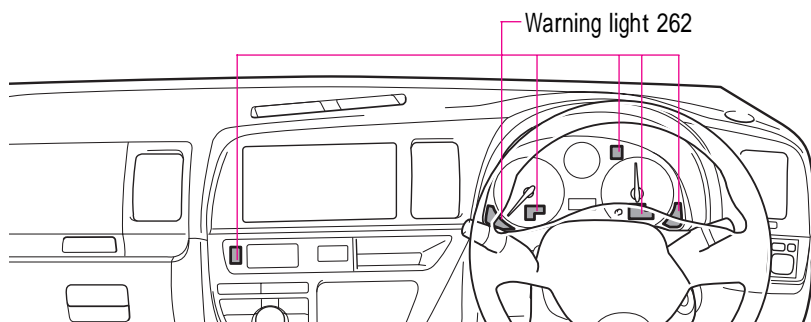

In the state of the warning light's lighting or blinking

Warning light	Warning reason
 Half door warning light	Either of door (Include the backing door) is not surely closed.
 Driver's seat seat belt non-wearing warning light	Those who drive have not worn the seat belt.
PASSENGER  Passenger's seat seat belt non-wearing warning	The crew in the passenger's seat has not worn the seat belt. -
 light brake warning light	The parking brake hangs. - When not turning it off even if the parking brake is released, it is dissatisfied of the brake liquid measure.
 The fuel remainder	The fuel cutting approaches. (Light by about 9L or less. )
P/S amount warning light power steering warning light	Abnormality of the power steering system.
 Dischargehedoramp warning light	Abnormality of auto leveling (upper and lower irradiation direction self adjustment) system of Dischargehedoramp.

## A detailed introduction concerning the warning light



### In the state of the warning light's lighting or blinking


Warning light	Warning reason
 SRS air bag/pretensioner warning light	Abnormality of the seat belt system with the SRS air bag system or the pretensioner.
 ABS & brake assistance warning light ABS warning light	Abnormality of ABS or the brake assistance.
VSC VSC warning light	Abnormality of the VSC system.
 Warning light of water	Abnormality of the engine electronically controlled system
 temperature of engine warning	etc.Abnormality of the pressure of oil in the engine.
 light oil pressure	Abnormality in the charge system.
4WD warning light charge warning	Abnormality of 4WD system.
 light 4WD warning light	Abnormality of the temperature of the engine cooling water. (Light in blue in red at the high temperature at the low temperature of blinking.)






## Running such as nighttime and rain


How to use of the reception desk wiper.

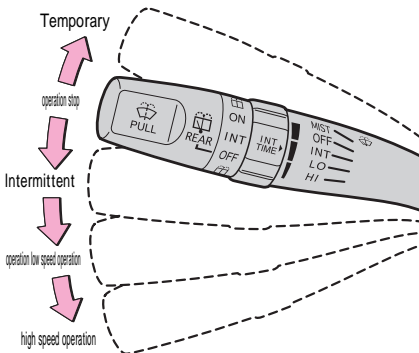

How to apply lamp

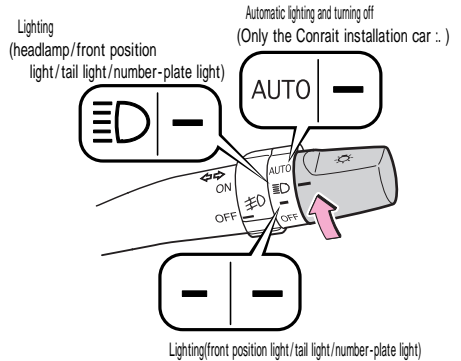


A detailed introduction concerning the switch

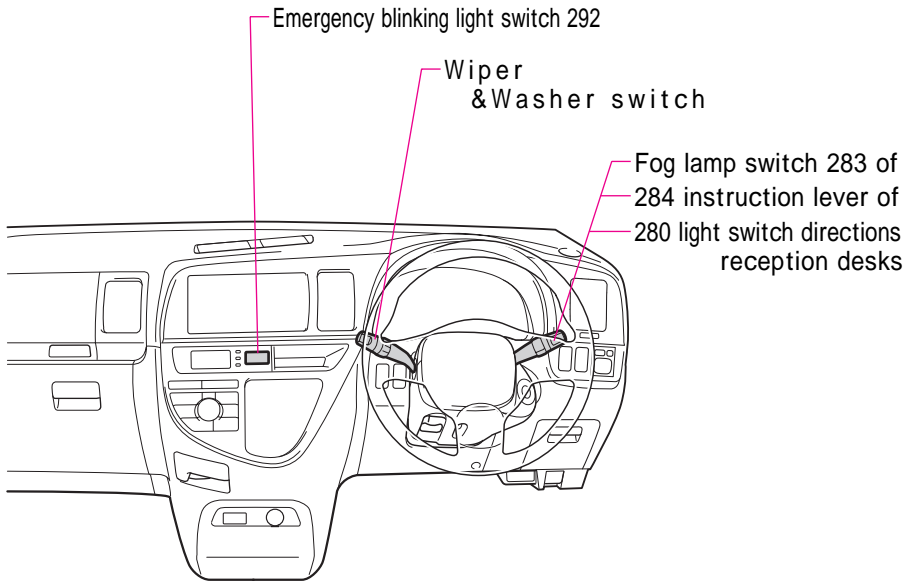


Signal to another car

Direction instruction light

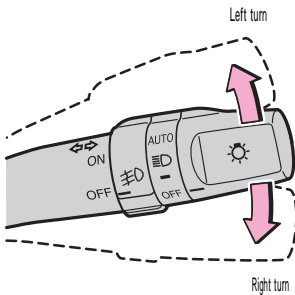

Emergency blinking light

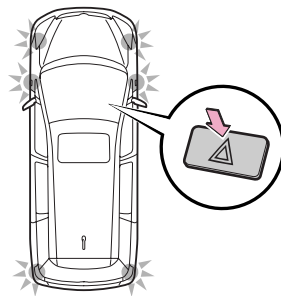

Contents



Warning

Basic  
settings, operation

Driving  
Handling  
device

The  
Handling indoor  
equipment

Good. Safety  
of  
To  
theory, practice  
and  
equipment

How  
to  
attention  
associate, aiming,  
car

Warning

Myriad  
OneID

7  
m

Index