

Seat arrangement


Index

Do the seat arrangement after often reading each explanation page.


The seat of the wish can be used as follows.

How to make * of table mode

Seven person getting on car

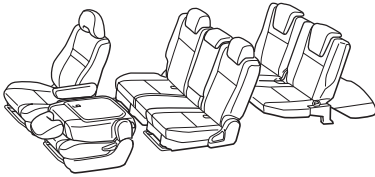


Six person getting on car

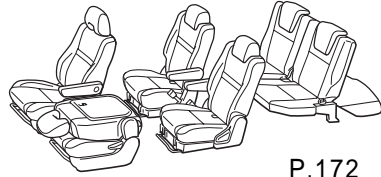


Method of Secandoshetodablforlding storage

Seven person getting on car

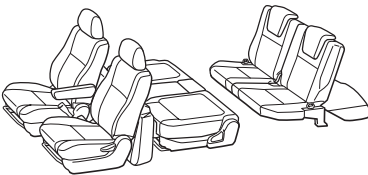


Six person getting on car

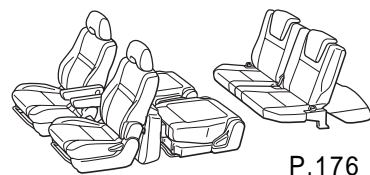


How to move up third seat

Seven person getting on car

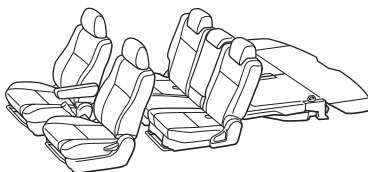


Six person getting on car

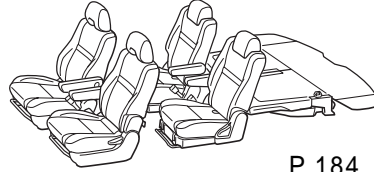


It is possible to arrange it according to the situation as follows by the use of the seat arrangement introduces by the left-hand page.

How to make relaxation mode

Seven person getting on car

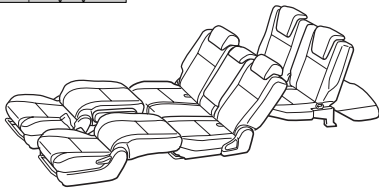


Six person getting on car

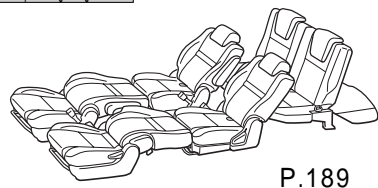


P. 189

How to make Big cabin mode

Seven person getting on car

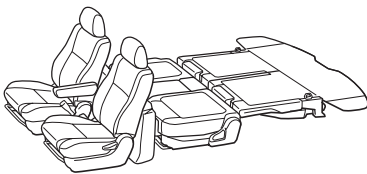


Six person getting on car

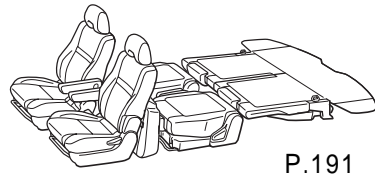


P. 191

How to make * of super-long space mode

Seven person getting on car

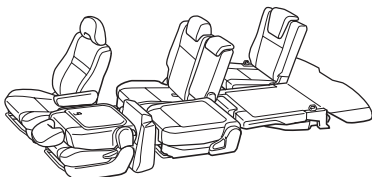

Six person getting on car

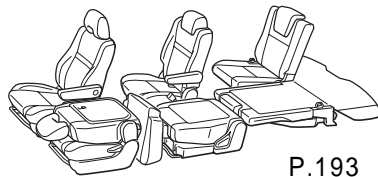

P. 193

How to make * of table mode


The back of the passenger's seat also knocks down the drip, and it is possible to use it as a table.

When making it to the table

1 Park the vehicle to a smooth place, and the gear-shift線Putting and parking bourreeSurely put Ki, and stop the engine.


2 Store it when you use the armrest (Raise it most up). Refer to P.160.

3 Knock down the buckle of the seat belt. Knock down the buckle forward full by the hand.

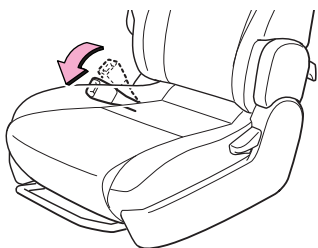

4 The back also knocks down the drip forward. The reclining lever must be pulled, the back also must knock down the drip forward, return to the position in which "Catitsu" and the sound are heard a little backward, and fix.



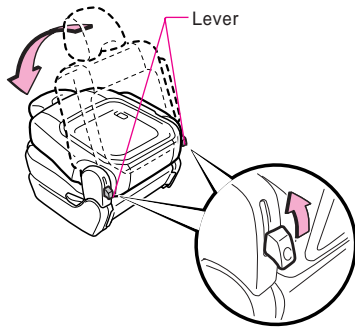

- 5** The back also knocks down the drip to the horizontal position. The lever on the part of seat is improved and the back also knocks down the drip. - The drip falls in the back only because of one of lever operations though there are two levers.

- 6** Confirm fixation. Confirm the light shake also of the back of the drip, and fixation surely.

Contents



Warning

Basic
controls, operationDriving
Handling
deviceThe
Handling/indoor
equipmentGood. Safety
of
To
theory/controls
and
equipmentHow
to
attention
associate driving,
car

Maintenance

Myriad
One/DC
with

Index

● When you return it

- 1** Park the vehicle to a smooth place, and the gear-shift線Putting and Parkingb Surely put Raki, and stop the engine.
- 2** The back also causes the drip.
The lever (Refer to last page) on the part of seat is improved, and the back also causes the drip to the fixed position.
- 3** Confirm fixation.
Confirm the light shake of the seat, and fixation surely.



Guard the following about the table mode.

- The gear-shift in a smooth place when it changes to the table mode, and it returns it and線Put, put the parking brake surely, and stop the engine. The seat moves unexpectedly while operating it unlevelled land and uphill, and hands and feet etc. are placed, and important injury might be received and it is dangerous. -
- Do not do the operation that is changed to the table mode, and returned while running. The important injury related to the life when it applied the brakes and when it collides might be received and it is dangerous. -
- Do not run while made to the table mode. The important injury related to the life when it applied the brakes and when it collides might be received and it is dangerous. -
- Never get on on the table. The seat is damaged, and an unexpected injury might be done and it is dangerous. -
- Confirm the light shake of the seat and fixation surely when it makes to the table mode, and it returns it. It moves while running if the seat is not surely fixed the seat, causes an unexpected accident, might injury, and is dangerous.



Knowledge

About the table mode

- The back of the seat also knocks down the drip while parking, and the seat can be used as a table. -

When making it to the table mode, the mark of the buckle might remain in the seat if the buckle of the seat belt is not knocked down forward before it changes to the table mode.

Contents



Warning

Basic
controls, operationDriving
Handling
deviceThe
Handling indoor
equipmentGood Safety
of
To
theory, vehicle
and
equipmentHow
to
attention
associate driving
car

Maintenance

Myriad
One(D)
と
with


Index


Method of Secandoshetodablforlding storage

It is possible to operate it according to a procedure similar as for six person getting on car though it explains with Secandoshet of seven person getting on car.

When you store it


- 1** Park the vehicle to a smooth place, and the gear-shift線Putting and parking bourreeSurely put Ki, and stop the engine.
- 2** Move the reception desk seat forward.
Refer to P.157.
- 3** Put it into the state to lower the headrest of Secandoshet.
Refer to P.163.
- 4** Store it when you use the armrest with six person getting on car (Raise it most up).
Refer to P.167.
- 5** Six person getting on car knocks down the buckle of the seat belt.
Knock down the buckle forward full by the hand.

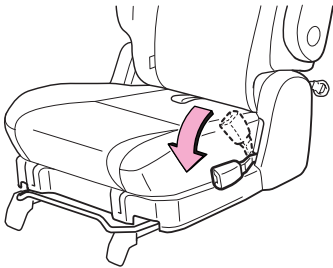

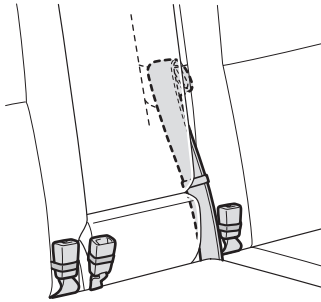


6 Seven person getting on car stores the seat belt or the buckle of Secandoshet. Refer to P.203.

Seat lock release belt

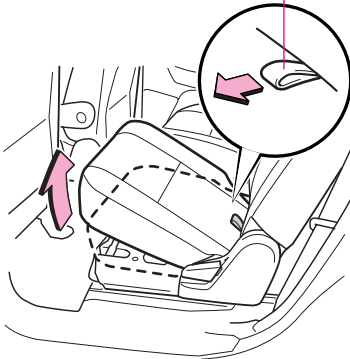


7 Pull the seat lock release belt at the rear end of the seat cushion forward. The lock of the seat cushion is released, and the edge goes up in front of the cushion. - Separate the hand from the belt once, and remove the lock surely when you pull the seat lock release belt.


- Contents
- Warning
- Basic engine operation
- Driving Handling device
- The Handling indoor equipment
- Good Safety of To theory/controls and equipment
- How to attention associate driving car
- Maintenance
- Myriad One(D)
- Index

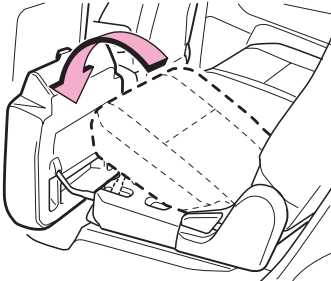

- 8** Cause the seat cushion forward.
The seat cushion might be locked when the seat cushion is rotated while it causes it, and it not return.

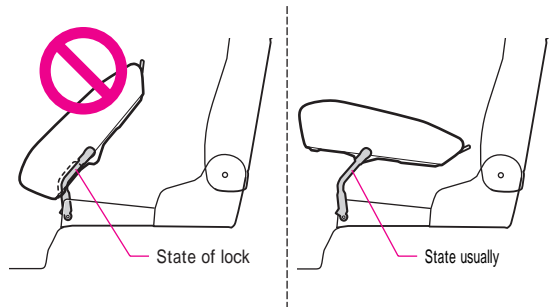


- Pull the seat lock release belt and release the lock when the seat cushion is locked.

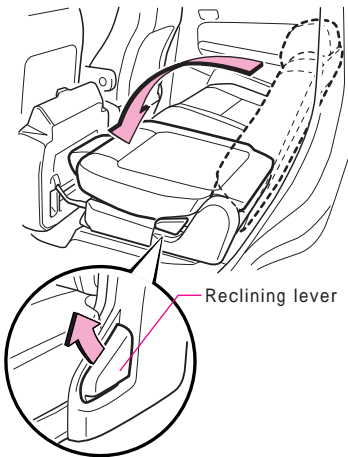


- 9** The back also knocks down the drip to the horizontal position.
Pull the reclining lever, and knock down the back until the drip becomes the horizontal.

- Contents
- Warning
- Basic settings, operation
- Driving Handling device
- The Handling indoor equipment
- Good Safety of To theory/damage and equipment
- How to attention associate driving car
- Maintenance
- Myriad One(D)
- 七
- Index

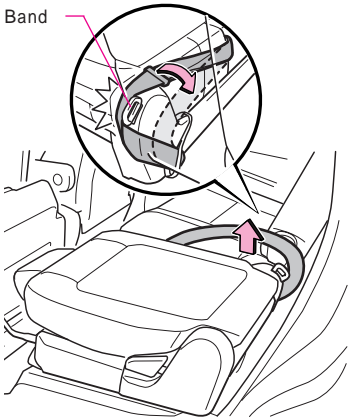


- Seven person getting on car must confirm the central seat seat belt is not caught to the band etc. on the part of seat.
Remove when caught.

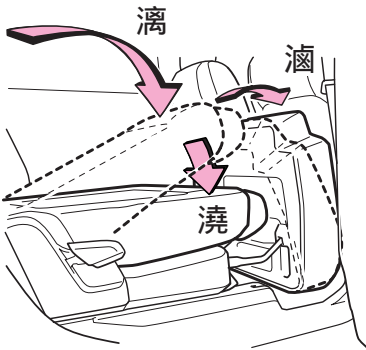

- A right seat of 4WD car
 滴 The back also knocks down the drip until it hits the seat cushion.
 澗 Push the seat cushion forward.
 澆 The back also knocks down the drip until becoming the horizontal.

10 Confirm fixation.
 Confirm the light shake also of the back of the drip, and fixation surely.

When you return it

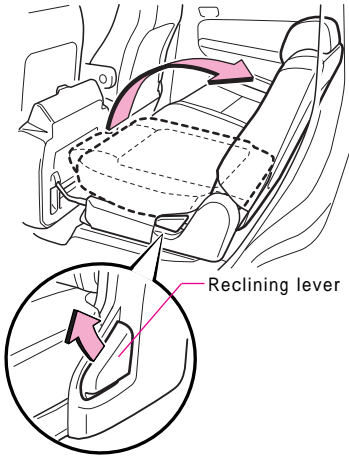

1 Park the vehicle to a smooth place, and the gear-shift線Putting and parking bourreeSurely put Ki, and stop the engine.


2 The back also causes the drip.
The reclining lever is pulled and the back also causes the drip. -

A right seat of 4WD car

滴The reclining lever is pulled and the back also causes the drip a little.

涵Push the seat cushion forward.


澆The back also causes the drip.

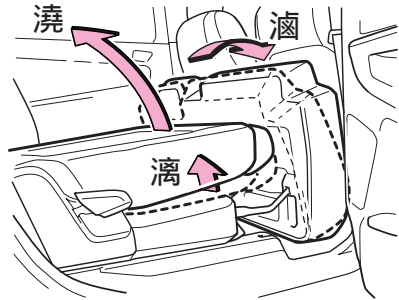


3 Confirm the seat belt or the buckle is stored.
Refer to P.203.



- 4 Knock down the seat cushion backward.

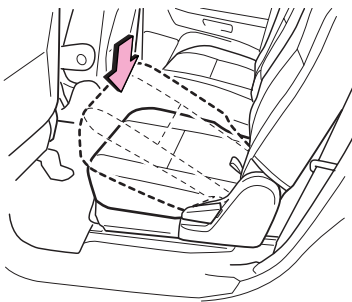

- 5 Fix the seat cushion.
Suppress the edge (part of the arrow) in front of the seat cushion. -
The hook under the seat cushion hangs to the striker, and the seat cushion is fixed.

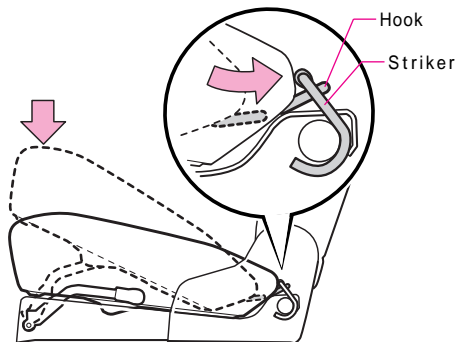

- Do not put the one on the foundation part of the seat cushion. The seat cushion is not surely fixed when returning it based on the seat cushion with there the one.

- 6 Confirm fixation.
Confirm the lift of the back of the seat cushion, and fixation surely.



Guard the following about the Secandoshetodablforlding storage .

- The gear-shift in a smooth place when the seat is stored, and it returns it and 緖Put, put the parking brake surely, and stop the engine. The seat moves unexpectedly while operating it unlevelled land and uphill, and hands and feet etc. are placed, and important injury might be received and it is dangerous. -
- The back knocked down must not run taking the person after the drip either. The important injury related to the life when time that slammed on the brakes and colliding might be received and it is dangerous. -
- Do not do the operation that stores the seat, and returns it while running. The important injury related to the life when it applied the brakes and when it collides might be received and it is dangerous. -
- Shake the seat before ..lightening.. and confirm fixation surely when you store the seat. Important injury that moves while running if not fixed the seat, causes an unexpected accident, and is related to the life might be received and it is dangerous. -
- Confirm the lift of the back of the seat cushion, and fixation surely when you return it based on the seat. Important injury that moves while running if not fixed the seat, causes an unexpected accident, and is related to the life might be received and it is dangerous.



The back also must operate the hand in the drip when the back also knocks down the drip and operate the reclining lever along can.

- The back also must operate the hand in the drip when the back also knocks down the drip and operate the reclining lever along can. When the back doesn't suppress the drip and either the lever is operated, the back falls suddenly the drip, and might be injured, too. -
- Do not run on the seat with the seat stored. The seat might be missed, and it injure by placing the foot between seats. -
- Confirm the seat belt and the buckle of Secandoshet are surely stored when the seat is stored by seven person getting on car, and it returns it and (Refer to P.203). When the operation that is stored without being stored, and returned is done, the seat might be damaged, and the seat belt and the buckle be damaged. -
- Confirm not caught to the band etc. on the part of ..central seat seat belt.. when you store the seat by seven person getting on car. When it is caught and the back also knocks down the drip forward, the seat belt storage pocket (Refer to P.203) causes the band to tear, and to transform. -
- Operate the seat cushion having it by the hand when the seat cushion is caused forward or it knocks it down backward. The belt might cut if the seat lock release belt is operated having it. -
- Do not get on the foundation part of the seat cushion when you cause the seat cushion forward. It is likely to damage it. -
- When you move the seat, put neither hand nor the foot under the seat. It is placed between the seat and it is likely to injure.

